


Send all guns for factory service and inquiries on
service and parts to
REMINGTON ARMS COMPANY, INC.
Arms Service Division
Ilion, New York 13357

All other inquiries are to be addressed to
REMINGTON ARMS COMPANY, INC.
Bridgeport, Connecticut 06602

MODEL 700 SNIPER

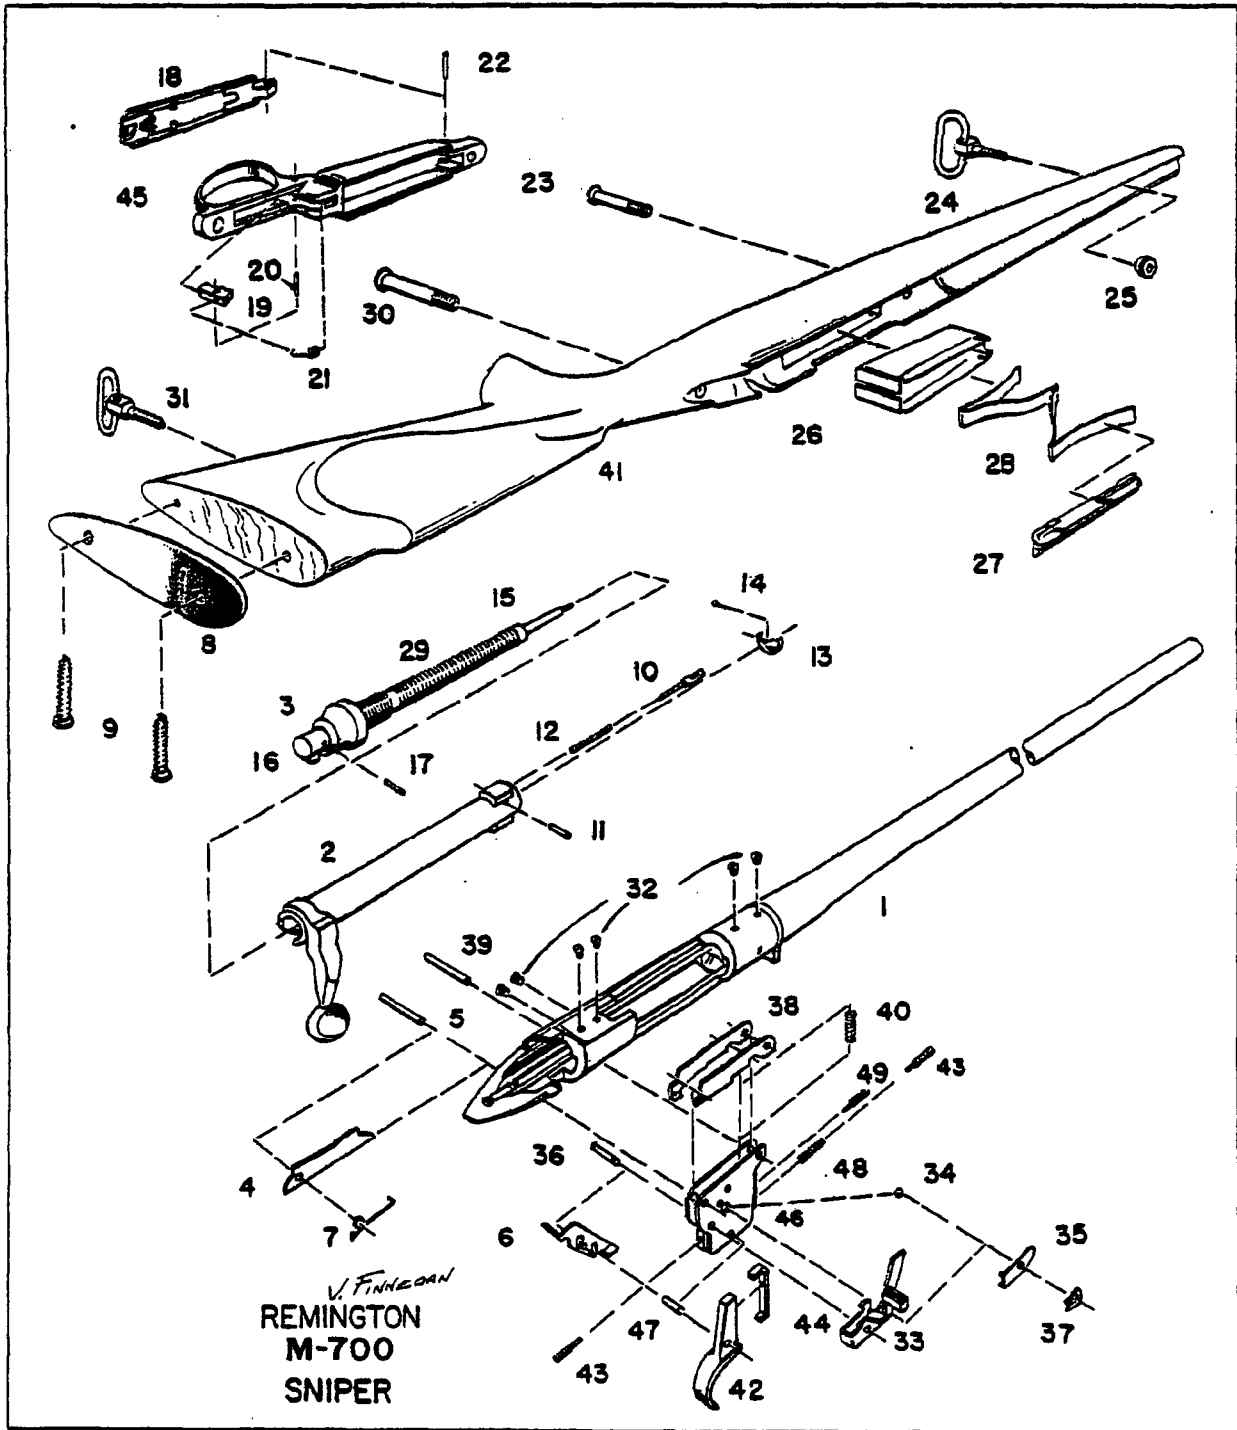

REPLACEMENT PARTS

When ordering parts specify model, caliber, part name and serial number of the gun.

NOTE: The sale of barrel assemblies and breech bolts is restricted. When these parts are needed for replacement, the arm must be returned to the

factory as the use of special tools and gauges is required to assure proper operation. All other parts will be shipped as ordered but, since they are made to close dimensions, the particular part may require slight adjustment or fitting to assure proper functioning of the arm.

COMPONENT PARTS

Remington

**MODEL
700
SNIPER**

BOLT ACTION -- HIGH POWER

7.62 NATO CALIBER

When ordering parts — Model No., Part No. and Part Name must be given.

View No.	Part No.	NAME OF PART	View No.	Part No.	NAME OF PART
1	16860	Barrel Assembly, 7.62 Cal. (includes Barrel, Barrel Bracket, Receiver)	30	22036	Rear Guard Screw
2	16861	Bolt Assembly (includes Bolt Body Assembly and Bolt Handle)	31	22560	Rear Swivel Assembly
	16862	Bolt Final Assembly (includes Bolt Assembly, Ejector, Ejector Pin, Ejector Spring, Extractor, Extractor Rivet, Firing Pin Assembly)	32	17034	Receiver Plug Screw
3	17012	Bolt Plug	33	26585	Safety Assembly (includes Safety, Safety Button)
4	17013	Bolt Stop	34	23222	Safety Detent Ball
5	24475	Bolt Stop Pin	35	15368	Safety Detent Spring
6	15478	Bolt Stop Release	36	17043	Safety Pivot Pin
7	15224	Bolt Stop Spring	37	17044	Safety Snap Washer
8	16601	Butt Plate	38	26590	Sear and Safety Cam Assembly (includes Safety Cam, Sear)
9	25410	Butt Plate Screw	39	24476	Sear Pin
10	17017	Ejector	40	17047	Sear Spring
11	17676	Ejector Pin	41	16865	Stock Assembly (includes Butt Plate, Butt Plate Screw (2), Stock, Stock Reinforcing Screw, Front Swivel Assembly, Front Swivel Nut, Rear Swivel Assembly)
12	17019	Ejector Spring		18186	Stock Reinforcing Screw
13	16254	Extractor	42	15280	Trigger
14	27340	Extractor Rivet	43	17053	Trigger Adjusting Screw
15	22021	Firing Pin		26345	Trigger Assembly (includes Bolt Stop Release, Trigger Housing Assembly, Safety Assembly, Safety Detent Ball, Safety Detent Spring, Safety Pivot Pin, Safety Snap Washer, Sear and Safety Cam Assembly, Sear Spring, Trigger, Trigger Adjusting Screw, Trigger Engagement Screw, Trigger Pin, Trigger Spring, Trigger Stop Screw)
16	22041	Firing Pin Assembly (includes Bolt Plug, Firing Pin, Firing Pin Cross Pin, Firing Pin Head, Main Spring)	44	19461	Trigger Connector
17	17022	Firing Pin Cross Pin	45	17053	Trigger Engagement Screw
18	16434	Floor Plate		26375	Trigger Guard
19	15291	Floor Plate Latch		26370	Trigger Guard Assembly (includes Floor Plate, Floor Plate Latch, Floor Plate Latch Pin, Floor Plate Latch Spring, Floor Plate Pivot Pin, Trigger Guard)
20	16451	Floor Plate Latch Pin	46	26655	Trigger Housing Assembly (includes Trigger Housing Spacer (3), Trigger Side Plate (2))
21	16452	Floor Plate Latch Spring	47	24477	Trigger Pin
22	16453	Floor Plate Pivot Pin	48	15400	Trigger Spring
23	16859	Front Guard Screw	49	15481	Trigger Stop Screw
24	16856	Front Swivel Assembly			
25	17682	Front Swivel Nut			
26	16857	Magazine			
27	15667	Magazine Follower			
28	15699	Magazine Spring			
29	17058	Main Spring			

DELIVERIES ARE F.O.B. ILION, N. Y.

PARTS SUBJECT TO CHANGE WITHOUT NOTICE

R2509964