


Fire Control

Ruger's fire control is adjustable for weight of pull, engagement, and over-travel. Instructions are given for adjusting trigger pull but adjustments to the engagement and over-travel is not recommended. The trigger pull adjustment screw is located in the trigger, just forward of the curved section, and is accessible with the rifle fully assembled. (Photo #8)

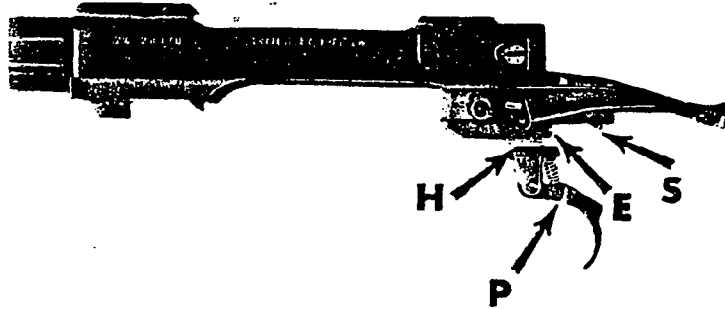

The sear in this rifle is pinned to the receiver while the trigger is attached to the fire control housing. (See Photo #8) The trigger and sear engage directly here.