1. B. Procedure - continued

- 4. Set the push pull gauge to zero. (Fig. 4 12)
 - Hold push pull gauge at the same plane that you intend to use it.
 - Put the red selector in the center position.


- 7 -

- Turn the dial on the face of the gauge until the zero lines up with the internal pointer.
- Push the red selector toward the end of the gauge you intend to push with. (Fig. 4 13) The gauge is now ready to use.

Figure 4 - 12

Figure 4 - 13



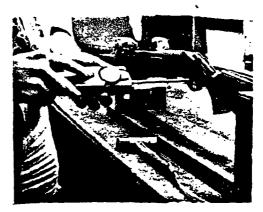

÷