

## SAFE "OFF - ON" FORCES

### TYPES OF SAFETY SWITCHES - cont'd.

1. The Cross-bolt type: *(may be either right or left handed)*  
The cross-bolt type safety switch is located at the rear of the trigger guard and is pushed to put the firearm in either the "Safe" position or in the "ready to fire" position. In the "ready to fire" position, a red line is visible on the the safety switch.

Figure No. 4 - 1  
Cross-bolt safety switch  
in "Safe" position.


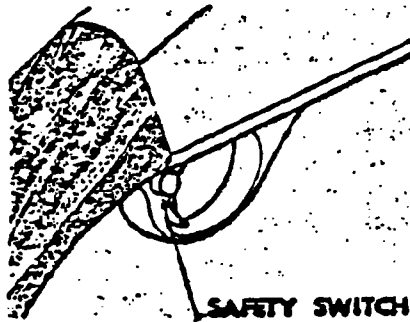


Figure No. 4 - 2  
Cross-bolt safety switch  
in "ready to fire" position.

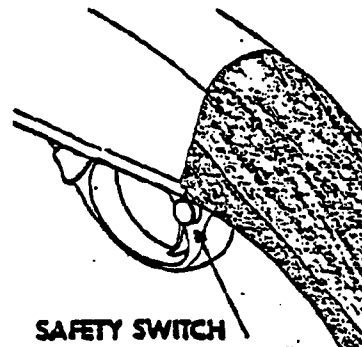

2. The Thumb Type:  
The thumb type safety switch is located to the right of the top tang and is pushed forward to put the firearm in the "ready to fire" position, or pushed rearward to put the firearm in the "safe" position.

Figure No. 4 - 3  
Thumb type safety switch  
in "Safe" position.

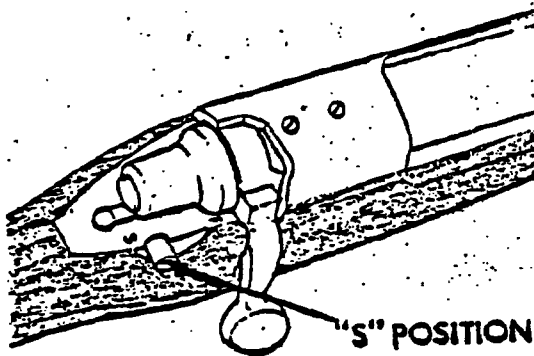


Figure No. 4 - 4  
Thumb type safety switch  
in "ready to fire" position.

