

IMPORTANT

The trigger balance and trigger balance spring are important parts of the trigger link assembly. The trigger pull is not adjustable on this pistol. The sear block spring, the trigger balance and trigger balance spring all contribute to trigger pull and proper functioning of the Trigger Link Assembly. The trigger balance with the help of the trigger balance spring exerts a rearward force on the sear block thru the trigger link which helps the sear block spring ensure an engagement force on the sear block during the time the action is cocked. The trigger balance is constructed so that it will also exert an increased rearward force on the trigger link if the pistol is bumped or dropped on the muzzle end.

If the action is removed from the stock, the trigger balance and spring must always be replaced during reassembly.

JW Brooks:T
2-9-79