7. WHENEVER YOU HAND YOUR A SIFLE TO ANOTHER PERSON always pen the bolt. Whenever you accept a gun rom another person, open the bolt if it isn't pen, and inspect the chamber and magaine to be sure all live rounds are cleared.

8. BE SURE OF YOUR BACKSTOP.

8. BE SURE OF YOUR BACKSTOP. Know the range of your rifle and be certain here is no chance of damage or accident. Never shoot at water or hard objects.

Never shoot at water or hard objects.

9. FOR EYE AND EAR PROTECTION we recommend that you aways wear shooting classes and hearing protection when shooting.

10. AMMUNITION — Your rifle must

10. AMMUNITION — Your rifle must be ed only with cartridges of the correct ca. as inscribed on the side of the barrel. The parrel and action of this rifle have been made with large safety margins over the presures developed by established commercial bads. Nevertheless, Browning can assume no responsibility for incidents which occur through use of cartridges of non-standard dimension or those developing pressures in excess of SAAMI (Sporting Arms and Ammunition Manufacturers' Institute) established standards.

ASSEMBLY


1. Clean the anti-rust compound from the barrel, the receiver, and the bolt with a clean rag and light gun oil such as Browning Gun Oil or Browning Liquid Gunsmith.

2. In order to insert the bolt the thumb safety must be pushed forward OFF SAFE. Align the forward end of the bolt in the rear opening of the receiver. Push the bolt completely forward and rotate the handle down to lock it. It is not necessary to depress the bolt stop to insert the bolt. Return the thumb safety to the "ON SAFE" position.

The rifle is now completely assembled and the bolt may be operated normally.

TO REMOVE THE BOLT

Verify that there are no cartridges in the chamber or in the magazine. Press in on the forward end of the bolt stop and draw the bolt to the rear completely removing it from the rifle. The bolt stop is the horizontal bar on the left side of the receiver. (See Figure 2.)

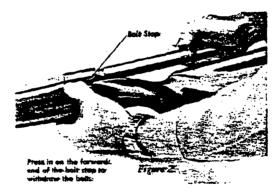

5