



READ THESE SAFETY RULES

- To use your firearm correctly and safely, read and follow the instructions in the enclosed firearms safety booklet and this instruction book.
- Always keep the muzzle pointed in a safe direction.
- Keep the barrel clean, and free of obstructions.
- Unload firearms when not in use. Keep firearms and ammunition away from children. Lock firearms and ammunition in separate cabinets.
- Unload your firearm before climbing up or over a fallen tree, fence or slippery area.
- Before you pull the trigger, make sure you can see the target clearly, and the path of the bullet beyond the target.
- Never fire at water, rocks, or any hard surface.
- Never enter a vehicle with a loaded firearm, or put a loaded firearm in a vehicle. Unload the firearm, then put it in a gun case for safe transport.
- Never shoot and drink alcoholic beverages at the same time.
- Check your firearm periodically to make sure it is mechanically correct. Keep the firearm clean.
- Do not play with the safety switch. Use it as shown in this book.

HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS
HOW TO LOAD AND UNLOAD
IMPORTANT PARTS
SAFETY RULES AND INFORMATION