

TO ASSEMBLE THE SLING STRAP

See picture 9 for the location of parts:


1. Slide the strap through the band.
2. Push the strap up through the first swivel.
3. Slide the strap back through the band.
4. Push the strap into and through the buckle.
5. Push the strap down and through the second swivel.
6. Align the slots in the strap and fasten with the brass fastener.

TO ATTACH THE SLING STRAP ASSEMBLY TO THE STOCK.

See picture 9 for location of parts:

7. Push plunger on swivel until the small plate lifts and is free of the stud.
8. Push the stud into the center of the swivel screw.
9. Close the plate on the swivel to lock the swivel to the swivel screw.
10. To adjust the length of the strap, pull the strap through the buckle.

TO REMOVE THE SLING FROM THE STOCK
To remove the sling strap assembly from the stock repeat step 7.

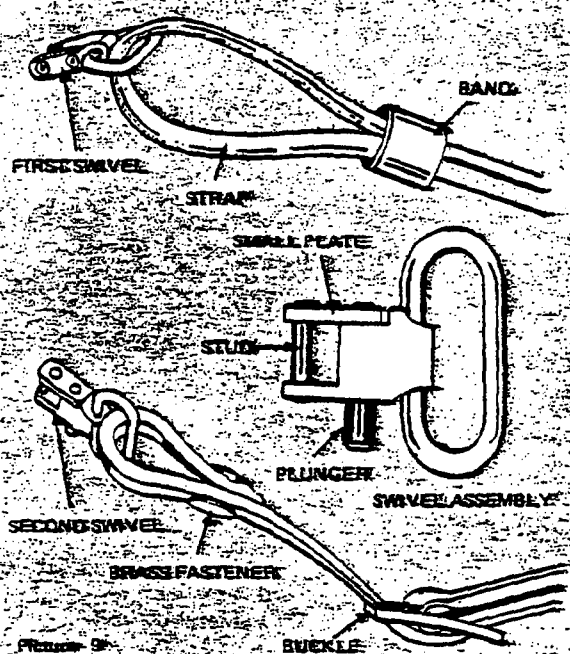

HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS