

2. Brush action spring and action tube with gun cleaning solvent.
3. Dry with clean cloth.
4. Apply a thin coat of Rem Oil to prevent rusting.
5. Replace the fore-end and tighten fore-end screw.

Cleaning the trigger plate

1. Engage the safety mechanism.
2. Close the action.
3. Tap out front and rear trigger plate pins.
4. Lift rear of the trigger plate assembly and remove the assembly from the receiver.
5. Spray the trigger plate assembly with Rem Oil as shown. Let stand for 15 minutes. Spray again to wash off components. Shake off excess lubricant.
6. Check to make sure that the end of the disconnecter is below end of left connector.
7. Carefully insert the trigger plate assembly into the receiver.
8. Position to align holes and tap in front and rear trigger plate pins.

Bolt-action

Cleaning the barrel

1. First check the chamber and magazine to make sure there are no cartridges in the firearm. It is a good idea to use the instructions and the equipment provided in a good cleaning kit.
2. Remove the bolt assembly.
3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

NOTE: Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.
8. Push a clean patch saturated with Rem Oil through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of Rem Oil to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

Cleaning the receiver and trigger assembly

1. Put the safety mechanism in the 'S' position.
2. Remove the bolt assembly.
3. Turn the rifle upside down.
4. Remove the stock screws.
5. Lift the stock away from the receiver and trigger assembly.