

MODELS WITHOUT A FLOOR PLATE ONLY: Remove the magazine spring and follower from the receiver.

6. Thoroughly spray the receiver inside and out with Rem Action Cleaner and allow drying.
7. Thoroughly spray inside the trigger assembly at the four points with Rem Action Cleaner.
8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.
9. Pull and hold the trigger rearward. Then using a small punch or screwdriver depress the sear and release multiple times.
10. Release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times.
11. Again thoroughly spray inside the trigger assembly at the four points with Rem Action Cleaner. Air dry or use compressed air to thoroughly dry the trigger assembly.
12. Place a drop of Rem Oil in each of the four points in the trigger
13. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times. Ensure the trigger returns completely to the forward position each time. If the trigger does not completely return, reassemble the rifle and return it to a Remington® Authorized Service Center.

WARNING! If the trigger does not fully return to the forward position each time it is released, then your rifle is NOT in a safe operating condition and it must NOT be used until you have had it inspected by a Remington Authorized Service Center.

14. If the trigger completely returns as specified, pull and hold the trigger rearward and using a small punch or screwdriver depress the sear and release multiple times. The sear must return to the full upward position without hesitation. If the sear does not freely return, reassemble the rifle and return it to a Remington Authorized Service Center.

WARNING! If the sear does not return to the full upward position without hesitation, then your rifle is NOT in a safe operating condition and it must NOT be used until you have had it inspected by a Remington Authorized Service Center.

15. If the sear freely returns to the full upward position, release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times. The safety must operate freely. The safety detent spring must position the safety in the full safe "S" or fire "F" position. The safety should not remain in a position anywhere between the full safe "S" or fire "F" position. If the safety does not freely return to the full safe "S" or fire "F" position, repeat operations 7 thru 15. If the safety does not freely return to the safe "S" or fire "F" position after repeating operations 7 thru 15, return the firearm to a Remington Authorized Service Center for an inspection of the safety and trigger assembly.
16. Place the safety in the safe "S" position and lightly spray Rem Oil on all the external surfaces of the trigger assembly and receiver. Wipe off excess oil.