


Remington® Bolt Action Centerfire Rifle

Congratulations on your choice of a Remington® Rifle. With proper care, it should give you many years of safe and enjoyable use. For best results, we recommend that you use Remington Ammunition – the ammunition used in factory testing your firearm against our exacting function and performance standards.


PICTURE 1

This picture shows the main parts of a Remington® Bolt Action Rifle. The picture will also be in understanding the instructions in this book.

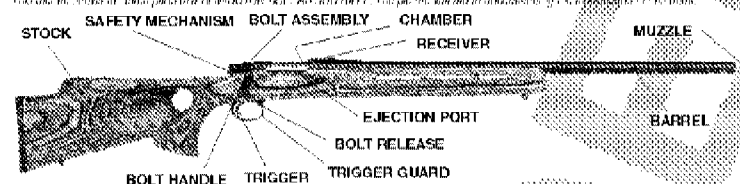

PICTURE 2

This picture shows the main parts of the ammunition.

 

Important Parts of the Firearm

The Safety Mechanism

Note: All Remington Bolt Action Rifles function the same regardless of button appearance.

The safety mechanism only acts as protection against accidental or unintentional discharge under normal usage when properly engaged and in good working order. The safety mechanism is not a substitute for following the rules of safe gun handling.

To engage the safety mechanism, pull the safety mechanism fully to the rear, towards the 'S' position. See Picture 3.

Always put the safety mechanism in the 'S' position before handling, loading or unloading the firearm.

When you are ready to fire the firearm, push the safety mechanism forward towards the 'F' position to disengage the safety mechanism. See Picture 4.

Do not touch the trigger while moving the safety mechanism. Your fingers and all other objects should be kept outside of the trigger guard and away from the trigger until you are actually ready to fire by pulling the trigger.

Never pull the trigger when the safety mechanism is in the 'S' position.

WARNING: The firearm will not fire if the trigger is pulled when the safety mechanism is in the 'S' position.

Even when the safety mechanism is in the 'F' position, safe gun handling can make it extremely dangerous to fire. See the 10 COMMANDMENTS OF FIREARM SAFETY ON PAGE 2.

The Security System

An external gun lock has been supplied with the rifle. The gun lock is a security device to help you prevent unauthorized use of your rifle. The instructions for the safe and proper use of the gun lock are provided in the packaging for the lock. READ AND FOLLOW THE INSTRUCTIONS for the gun lock. You may also obtain the instructions and warnings for the gun lock on the Remington website at WWW.REMINGTON.COM, or by calling Remington's toll-free number at 1-800-243-8700.