

To Unload the Firearm

There are three types of Model 700™ rifles: one with a FLOOR PLATE, one without a FLOOR PLATE and one with a DETACHABLE MAGAZINE BOX.

INSTRUCTIONS FOR THE MODELS WITH A FLOOR PLATE:

1. Point the muzzle of the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle rearward with your other hand to remove the cartridge from the chamber.
6. Hold cartridge and remove it from the firearm.
7. Put your hand under the floor plate.
8. Push the floor plate latch to release the floor plate. See Picture 13 for Model 700 or Picture 14 for Model Seven™. The magazine spring and follower will be released from the magazine.
9. Remove released cartridges.
10. Push in the magazine follower, then close the floor plate.

WARNING! Check the chamber and the magazine to make sure there are no cartridges in the firearm.

INSTRUCTIONS FOR THE MODELS WITHOUT A FLOOR PLATE:

1. Repeat Steps 1 through 6 on page 10 and above.
2. Keep the muzzle pointed in a safe direction. Push the bolt handle slowly forward until the cartridge is released from the magazine.

CAUTION: The cartridge may slide into the chamber if the bolt is pushed into the forward. See NOTE below.

3. Pull the bolt handle fully back and removes the cartridge from the ejection port.
4. Repeat Steps 2 and 3 until the magazine is empty.

WARNING! Check the chamber and the magazine to make sure there are no cartridges in the firearm.

NOTE: If the bolt is pushed all the way forward and a cartridge slides into the chamber, the gun can be fired. Normally, the cartridge will slide out of the chamber when the bolt is pulled back. If the cartridge remains in the chamber, point the muzzle in a safe direction, slide the bolt forward all the way and push the bolt handle down to close the bolt. Then repeat Steps 1 through 4 above.

INSTRUCTIONS FOR THE MODELS WITH A DETACHABLE MAGAZINE BOX:

1. Point the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle rearward with your other hand to remove the cartridge from the chamber.
6. Depress both latches (Model 700) or one latch (Model 710™) to release magazine box. See Picture 12 on page 10.
7. Remove all the cartridges from the magazine box.
8. Replace the magazine box.

WARNING! Check the chamber and the magazine to make sure there are no cartridges in the firearm.

To Adjust Sights


TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target. See Picture 15.

NOTE: For more or better ballistic trajectory, see the REMINGTON® catalog.



All models should be zeroed at the factory to hit a target at 100 yards.

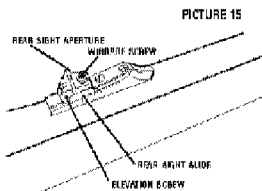

PICTURE 15