

CONFIDENTIAL

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use correct size cleaning rod.
2. Push cleaning rod from the chamber end all the way through the barrel, until the rod comes out of the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON AUTHORIZED SERVICE CENTER.

WARNING: NEVER try to remove an object from the barrel by loading a shot or cartridge and firing. This may cause the barrel to burst or a cartridge case to rupture and cause serious personal injury.


III. TO CLEAN THE BARREL FOLLOW THE INSTRUCTIONS SHOWN ON PAGE 10.

Before loading the firearm, make sure that inside of the barrel is free of dirt or other contamination.

To Load the Firearm

TO LOAD ONE CARTRIDGE ONLY:

1. Point the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Pull the bolt handle all the way back.
5. Put one cartridge of the correct caliber on the loading platform in the chamber. See PICTURE 7.
6. Slowly pull the bolt handle forward, then push the bolt handle down to lock the cartridge into the chamber.

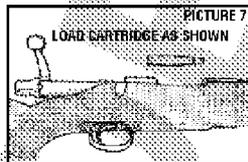

THE FIREARM IS NOW LOADED.

7. When you have the firearm pointed safely downrange and are ready to fire, put the safety mechanism in the 'F' or fire position.

THE FIREARM IS NOW READY TO FIRE BY PULLING THE TRIGGER.

WARNING: Always check the cartridge for the correct caliber before loading the firearm.

To Unload the Firearm

1. Point the muzzle of the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle rearward with your other hand to remove the cartridge from the chamber.
6. Hold cartridge and remove it from the firearm.

WARNING: Check the chamber and the loading platform to make sure there are no cartridges in the firearm.

TELESCOPIC SIGHTS:

The top of the receiver has holes for the mounting of optional telescopic sights.

Lubrication and Maintenance

When the firearm is to be stored, it should be carefully cleaned and thoroughly oiled. Outside surfaces should be wiped with a light coat of Rem™ Oil occasionally. When the firearm is to be released, all excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington® Rem™ Oil is available from your local dealer. If your dealer is out of stock, ask him to order Rem™ Oil from his Remington distributor.

To Clean the Barrel

WARNING: Check the chamber and magazine to be sure there are no cartridges in the firearm.

1. Use the equipment provided in a good cleaning kit. For recommendations, see your REMINGTON AUTHORIZED SERVICE CENTER.
2. Remove the bolt assembly. See instructions on page 8.