

Note: Only use the caps or primers intended for use with the nipple installed in the firearm.

1. Place the correct percussion cap, musket cap or No. 209 primer on the nipple.
2. Slide the bolt handle forward and push the bolt handle down.

NOW THE RIFLE IS LOADED.

To make the rifle ready to fire, put the safety mechanism in the "F" position.

NOW THE RIFLE IS READY TO FIRE.

Pulling the trigger fires the rifle.

Warning: wait at least one full minute after firing the last round before pouring powder into the bore to allow time for any residual sparks to be extinguished.