

NOTE: Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.
8. Push a clean patch saturated with Rem Oil through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of Rem Oil to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

Cleaning the receiver and trigger assembly

1. Put the safety mechanism in the 'S' position.
2. Remove the bolt assembly.
3. Turn the rifle upside down.
4. Remove the stock screws.
5. Lift the stock away from the receiver and trigger assembly.

MODELS WITHOUT A FLOOR PLATE ONLY: Remove the magazine spring and follower from the receiver.

6. Thoroughly spray the receiver inside and out with Rem Action Cleaner and allow drying.
7. Thoroughly spray inside the trigger assembly at the four points with Rem Action Cleaner.
8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.
9. Pull and hold the trigger rearward. Then using a small punch or screwdriver depress the sear and release multiple times.
10. Release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times.
11. Again thoroughly spray inside the trigger assembly at the four points with Rem Action Cleaner. Air dry or use compressed air to thoroughly dry the trigger assembly.
12. Place a drop of Rem Oil in each of the four points in the trigger
13. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times. Ensure the trigger returns completely to the forward position each time. If the trigger does not completely return, reassemble the rifle and return it to a Remington® Authorized Service Center.

WARNING! If the trigger does not fully return to the forward position each time it is released, then your rifle is NOT in a safe operating condition and it must NOT be used until you have had it inspected by a Remington Authorized Service Center.

14. If the trigger completely returns as specified, pull and hold the trigger rearward and using a small punch or screwdriver depress the sear and release multiple times. The sear must return