TLW_/303			
Project No241314			
S.A.A.M.I. JAR-OFF, DROP & ROTATION TEST			
OTATION TEST			
recontrol No. A-44 Firecontrol Type: STANDARD Date: 1-6-04 y Cycles/Rounds Completed: Stock Type SVN gagement at Start (1) .0204 (2) .0201 (3) .0201 Average .0202 gagement at End (1) .0212 (2) .0209 (3) .0204 Average .0208 odel No. M/7/0 Serial No. 7/149/50 gger Pull at Start of Test (1) %25 (2) 4.0 (3) 4.0 (4) 4.0 (5) 4.25 rerage Trigger Pull at Start of Test: 4.1 Std. Dev. of Trigger Pull at Start of Test: 19ger Pull at End of Test: 4.9 Std. Dev. of Trigger Pull at End of Test: 19ger Pull at En			
Additional Notes and Comments			
For additional details on the proper procedures to be used for this Test Procedure refer to: ANSI / SAAMI Z299.5-1990 SAAMI Specifications for Standard Rotation Test: Rotation Test: Rest Firearm on the Butt end and allow Firearm to fall Drop - onto 1" thick 85 Durometer (Shore A) Rubber Matt Firearm not ready to fire, Safe in "Safe" position, Fresh Primed Case in Chamber, Magazine loaded to capacity with Dummy Rounds. After each drop Fire Primed Case to verify firearm will still function. "Rotation Test" (safety in "Safe" position) - one drop per orientation. Note: for Firearms with the ISS system installed — The Firearms will be set with the ISS system in the unlocked position for both orientations of the Rotation Test. Orientation ISS Unlocked Comments Firearm Vertical, Drop so left side of Stock is Up: Pass Fail Notes: (continue on back of sheet if necessary)			
Tester's Initials			
Tr. 191			

ET21427

<i>;</i>		TLW /3 03	
		Project No. 241314	
S.A.A.M.I, J	AR-OFF, DROP & F	ROTATION TEST	
R-OFF TEST econtrol No. 4-44	Firecontrol Type: 57/	TNDARD Date: 1-6-	04
Cycles/Rounds Completed:			<u> </u>
gagement at Start (1) , 02/2 (2) ,0209 (3) ,020	9 Average _,0208	
gagement at End (1) .0202 (2		9 Average . 0/996	
	o. 7/149/50	5 (4) 4.0 (5) 4.5	
gger Pull at Start of Test (1) 4.0 erage Trigger Pull at Start of Test:	(2) 9-0 (3) 3.7 4 0.5 Std. Dev. o		
gger Pull at End of Test (1) 3.72	3 (2) 3.831 (3) 40	144 (4) 3.893 (5) 4.007	·
erage Trigger Pull at End of Test:	3.900 Std. Dev. o	of Trigger Pull at End of Test:	
Neset Ad	ditional Notes and Com	Tester Initials: 7.5/ B	<u></u>
age-Pull Jar-off Test !	2. 934 - 4. 090 - 4.17	8 - 4.136 - 4.054 AUG. 4.075	3 83
agagement far off jest	0207-,0203-,620	5-Aug. 9305	AN TANK
			,ev.
			
For additional details on the	proper procedures to be	used for this Test Procedure refer to:	
	ANSI/SAAMI Z299.	5-1990	
SAAMI Specifications for	. 경우의 (원. 19 21년)	5x ¹⁷	
	·艾德斯 [18] [18] [18] [18] [18] [18] [18] [18]		
Jar-Off Test: 12-inch at	op - onto 1 thick 85 Di eady to the Safe in "Fir	rometer (Shore A) Rubber Matt e" position, Fresh Primed Case in	
		acity with Dummy Rounds.	
		to verify firearm will still function.	
12 inch drop (sa	fety in "Fire" position) -	one drop per orientation.	
		The ISS will be set in the unlocked	
4 3 3 4 5 4 5 4 5 5 5 5 5 5 5 5 5 5 5 5	for all six orientations o		
	S Unlocked	Comments	
Barrel Vertical, Muzzle Up:	PassFail		
Barrel Vertical, Muzzle Down:	Pass V Fail		
Barrel Horizontal, Left side of Stock Up:	PassFail		
Barrel Horizontal, Right side of Stock Up		<u> </u>	
Barrel Horizontal, Bottom of Stock Up:	Pass V Fail		
Barrel Horizontal, Bottom of Stock Down	: Pass Fail	Fined on the drop	
Notes: (continue on back of sheet if necessary)			
		· · · · · · · · · · · · · · · · · · ·	 .
		Tester's Initials JS/BL	

	TLW/3 0.3
	Project No. 24/3/4
S.A.A.M.I. JAR-OFF	, DROP & ROTATION TEST
OP TEST	
econtrol No. A-44 Firecontro	Type: STANDARD Date: 1-7-04
Cycles/Rounds Completed: Stor	ck Type SVN Engagement at Start .0208
gagement at Start (1) .0209 (2) .0208	ck Type SVN Engagement at Start .0208 (3) . 0209 Average .0208
gagement at End (1) <u>02/9</u> (2) <u>0226</u>	(3) <u>02/5</u> Average <u>022</u>
odel No	149150 Engagement at End 4042
gger Pull at Start of Test (1) 4.072 (2) 4.0	
erage Trigger Pull at Start of Test: 4042	
gger Pull at End of Test (1) 3.8.2.1 (2) 3.	
erosectus Reference of the stranger of the str	Std. Dev. of Trigger Pull at End of Test: Tester Initials: JS/BL
Additional N	otes and Comments
reset eng Ave, -, 0229 Reset Frigger Rell &	
Reset Frigger Rell &	(508
For additional details on the proper pro	ocedures to be used for this Test Procedure refer to:
	SAAME 2299.5-1990
	- 이 실행, 이 명한 전
and 37 4 7 1975 - 300 c	tions for Standard Drop Test:
Drop Test: 48-inch drop - onto	1". Hick 85 Durometer (Shore A) Rubber Matt
Firearn not ready to	fire, Safe in "Safe" position, Fresh Primed Case
- 4人の指導を行う - 第八名 「たっぱく」 127年 - 元八名 - 元 - 元 - 元 - 元 - 元 - 元 - 元 - 元 - 元 -	ine loaded to capacity with Dummy Rounds.
After each drop Fire	Primed Case to verify firearm will still function.
48 inch drop (safety in "Sa	fe" position) - one drop per orientation.
	· · · · · · · · · · · · · · · · ·
Nate: for Firearms with the 155 systems	em installed – The Firearms will be set with the
ISS system in the unlocked posi	tion for all six orientations of the Drop Test
Orientation ISS Unlocks	ed Comments
Barrel Vertical, Muzzle Up: Pass	
	Fail
Barrel Vertical, Muzzle Down: Pass	
Barrel Vertical, Muzzle Down: Pass Barrel Horizontal, Left side of Stock Up: Pass	fail
Barrel Horizontal, Left side of Stock Up: Pass	
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass	Fail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass	FailFail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass Barrel Horizontal, Bottom of Stock Down: Pass	Fail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass	FailFail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass Barrel Horizontal, Bottom of Stock Down: Pass	FailFail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass Barrel Horizontal, Bottom of Stock Down: Pass	Fail
Barrel Horizontal, Left side of Stock Up: Pass Barrel Horizontal, Right side of Stock Up: Pass Barrel Horizontal, Bottom of Stock Up: Pass Barrel Horizontal, Bottom of Stock Down: Pass	Fail Fail