

<b>Summary</b>	<b>Total Test + Proof Failures</b>		<b>770</b>					
	<b>Total Rejected:</b>		<b>73</b>					
	<b>Overall Reject Rate:</b>		<b>9.48</b>					
<b>Proof</b>	Shot:	396	87	178	28		53	
	Rejected:	0	1	0	0	0	0	0
	Percent:	0.0	1.1	0.0	0.0		0.0	
<b>Test</b>	Shot:	445	50	148	28	2	19	
	Rejected:	14	5	27	0	1	4	0
	Percent:	3.1	10.0	18.2	0.0	50.0	21.1	
<b>Target</b>	Shot:	51	3	14	28		2	
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0		0.0	

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber	1					3	
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	5		1		1		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							
BWCFM	Bolt won't close over full magazine		3	2				
CD	Case dented							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
CH	Closes hard		1					
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe						1	
DX	Doesn't extract							
DXL	Doesn't extract live round	1						
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							
FA	Fires automatically							
FB	Follower binds							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
FC	Fails to connect							
FCB	Fore-end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens							
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips	1						
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift	3		18				
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							
ML	Magazine loose							
MLH	Magazine loads hard							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides			1				
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber	3		4				
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline							
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride		1					
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							
SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							



CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety ewitxh won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded			1				
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							
AI-P	Assembly incompleye at proof							
BBB	Barrel bracket cracked or broken at proof							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions		1					

totals									
25			36	1			30		854
0	0	0	0	0	0		1		2
0.0		0.0	0.0	0.0			3.3		0.2
11	11	23					31		768
1	2	4		0			13		71
9.1	18.2	17.4					41.9		9.2
2	1	3							104
0	0	0		0			0		0
0.0	0.0	0.0							0.0
7400	7500	7600	7400 Weathermaster	7600 Weathermaster	Rimfire	totals			
									4
									7
									5

[illegible]



[illegible]







<b>Summary</b>		<b>Total Test + Proof Failures</b>		<b>770</b>			
		<b>Total Rejected:</b>		<b>73</b>			
		<b>Overall Reject Rate:</b>		<b>9.48</b>			
<b>Proof</b>	Shot:	396	87	178	28	53	
	Rejected:	0	1	0	0	0	0
	Percent:	0.0	1.1	0.0	0.0	0.0	
<b>Test</b>	Shot:	445	50	148	28	2	19
	Rejected:	14	5	27	0	1	4
	Percent:	3.1	10.0	18.2	0.0	50.0	21.1
<b>Target</b>	Shot:	51	3	14	28	2	
	Rejected:	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0	0.0	

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber	1					3	
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	5		1		1		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine		3	2				
CD	Case dented							
CH	Closes hard		1					
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe					1		
DX	Doesn't extract							
DXL	Doesn't extract live round	1						
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens							
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips	1						
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift	3		18				
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides			1				
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber	3		4				
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline							
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride		1					
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							

SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded			1				
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions		1					

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:

**totals**

0

3

○

0

2

1

0

9

0

Q

0

2

1

0

0

0

9

D

0

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

**Test Date:****totals**

3

---

0

0

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date: \_\_\_\_\_

**totals**

[illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

**Test Date:****totals**

3

---

0

0

[illegible]













Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
Test	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
Target	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several shaded regions with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:

**totals**

3

---

0

0

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

**Test Date:****totals**

3

---

0

0

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	0
	<b>Total Rejected:</b>	0
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several rectangular regions filled with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							
FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore-end cracked or broken							
FD	Follows-down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens							
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips							
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							
ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides							
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber							
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline							
SIC	Stems in chamber							
SL	shaves lead							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride							
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							
SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety ewitxh won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							
AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							

CODE	MALFUNCTION INDEX	700 ADL	700 BDL	700 SS	700 Police	700 ML	Model 7	Model 7 Stainless
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:

**totals**

3

---

0

0

[illegible]









[illegible]



7400	7500	7600	7400 Weathermaster	7600 Weathermaster	Rimfire	totals