

**IMPORTANT**  
READ THIS BOOK BEFORE USING THE FIREARM

## INSTRUCTION BOOK

Model 700

Bolt Action,

Center Fire Rifle

**Remington®**



HOW TO ORDER PARTS AND SERVICE  
CLEANING INSTRUCTIONS

HOW TO LOAD AND UNLOAD

IMPORTANT PARTS


SAFETY RULES AND INFORMATION

1/162

1982

# MODEL 700 BOLT ACTION RIFLE


PICTURE 1

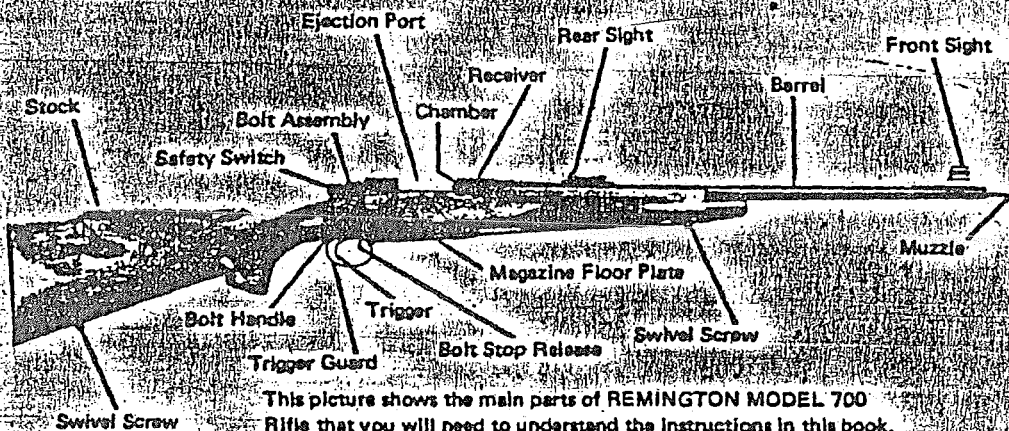

This picture shows the main parts of REMINGTON MODEL 700 Rifle that you will need to understand the instructions in this book.

This picture shows the parts of the ammunition:

PICTURE 2  
AMMUNITION

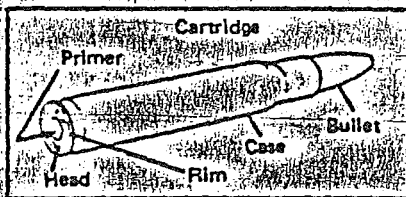



## READ THESE SAFETY RULES

- To use your firearm correctly and safely, read and follow the instructions in the enclosed firearms safety booklet and this instruction book.
- Always keep the muzzle pointed in a safe direction.
- Keep the barrel clean, and free of obstructions.
- Unload firearms when not in use. Keep firearms and ammunition away from children. Lock firearms and ammunition in separate cabinets.
- Unload your firearm before climbing up or over a fallen tree, fence or slippery area.
- Before you pull the trigger, make sure you can see the target clearly, and the path of the bullet beyond the target.
- Never fire at water, rocks, or any hard surface.
- Never enter a vehicle with a loaded firearm, or put a loaded firearm in a vehicle. Unload the firearm, then put it in a gun case for safe transport.
- Never shoot and drink alcoholic beverages at the same time.
- Check your firearm periodically to make sure it is mechanically correct. Keep the firearm clean.
- Do not play with the safety switch. Use it as shown in this book.

SAFETY RULES AND INFORMATION


IMPORTANT PARTS

HOW TO LOAD AND UNLOAD

CLEANING INSTRUCTIONS

HOW TO ORDER PARTS AND SERVICE

## SAFETY INFORMATION

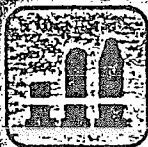

### NEVER USE THE WRONG AMMUNITION:

- Only use ammunition of the correct caliber, that is in good condition.
- Before loading, check the caliber shown on the ammunition, and caliber shown on the firearm. They must be the same caliber.
- Handloads can be dangerous. Remington Arms Company, Inc., is not responsible for accidents or damage caused by badly loaded handloads.




### NEVER MAKE ADJUSTMENTS:

- Do not make changes or alterations to any parts of a firearm. Use only REMINGTON parts.
- Never make an adjustment to the trigger, or change the shape or size of the sear, sear notch, or other parts.



### EYE PROTECTION:

- Wear safety glasses when using a firearm.

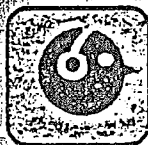

### EAR PROTECTION:

- Wear hearing protectors when firing to adjust the sights.



## IMPORTANT PARTS OF THE FIREARM

### THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position before handling, loading or unloading the firearm.

When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Do not touch the trigger while moving the safety switch.


Never pull the trigger when the safety switch is in the "S" position.

**WARNING:** The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.




Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

Picture 3

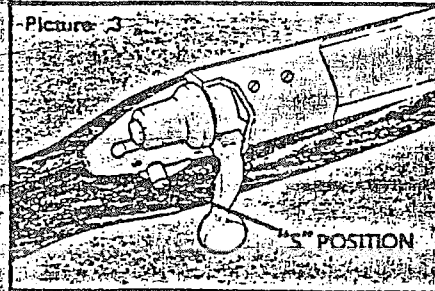

Picture 4

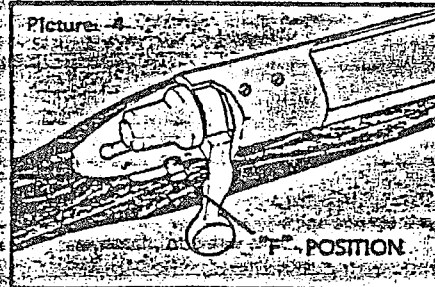

IMPORTANT PARTS

HOW TO LOAD AND UNLOAD

CLEANING INSTRUCTIONS

HOW TO ORDER PARTS AND SERVICE

## THE BOLT ASSEMBLY




The bolt assembly locks the cartridge into the chamber.

### TO INSTALL THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Align the lugs on the bolt assembly with the receiver. See picture 5.
4. Slide the bolt assembly into the receiver and push all the way in.
5. To lock the bolt assembly into position push the bolt handle down.

### TO REMOVE THE BOLT ASSEMBLY:


1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Do not touch the trigger while moving the safety switch.
4. Raise the bolt handle.
5. Pull the bolt handle all the way back.
6. Push the bolt stop release. See picture 5.
7. As you push the bolt stop release, slide the bolt from the firearm.

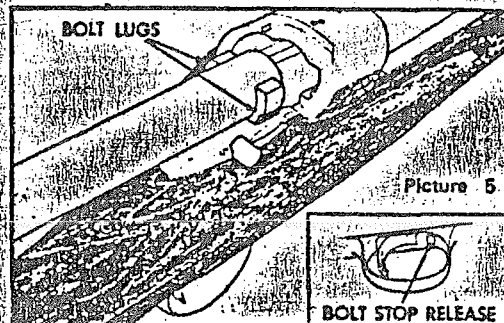

## THE TRIGGER ASSEMBLY

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.

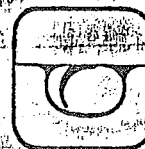

Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



**NEVER** put your finger on the trigger unless you are going to fire the firearm.



## THE BARREL

The inside of the barrel must be clean and free of obstructions.

### I. TO CHECK THE INSIDE OF THE BARREL:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.
5. Pull the bolt handle all the way back.
6. Remove any ammunition from the chamber or magazine. See page 8.
7. Remove the bolt. See page 8.
8. Look through the inside of the barrel from the chamber end to the muzzle. See picture 1.

### II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use the correct size cleaning rod.
2. Push the cleaning rod from the chamber end all the way through the barrel, until the rod comes out the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON RECOMMENDED GUNSMITH.



NEVER try to remove an object from the barrel by loading another cartridge and firing.

### III. TO CLEAN THE BARREL FOLLOW INSTRUCTIONS SHOWN ON PAGE 11.

Before loading the firearm make sure the inside of the barrel is free of dirt or other objects.

HOW TO LOAD AND UNLOAD

HOW TO ORDER PARTS AND SERVICE

CLEANING INSTRUCTIONS

## TO LOAD THE FIREARM

### TO LOAD THE MAGAZINE AND CHAMBER:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Pull the bolt handle all the way back.
5. Push four cartridges of the correct caliber, one at a time into the magazine. If the firearm is a magnum, you only load three cartridges. Keep the bullets aligned toward the chamber. See picture 6.
6. Put one cartridge into the chamber.
7. Use your fingers to push the cartridges in the magazine all the way down. Slowly slide the bolt assembly forward, so that the bolt slides over the top of the cartridges in the magazine.
8. Push the bolt handle down.

### THE FIREARM IS NOW LOADED.

9. To fire the firearm put the safety switch in the "F" position.

### THE FIREARM IS READY TO FIRE.

### TO LOAD ONE CARTRIDGE ONLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.


4. Pull the bolt handle all the way back.
5. Put one cartridge of the correct caliber on the magazine follower, or in the chamber. See picture 6.
6. Slide the bolt handle forward, then push the bolt handle down to lock the cartridge into the chamber.

### THE FIREARM IS NOW LOADED.

7. To fire the firearm put the safety switch in the "F" position.

### THE FIREARM IS READY TO FIRE.

**WARNING:** Always check the cartridge for the correct caliber before loading the firearm.

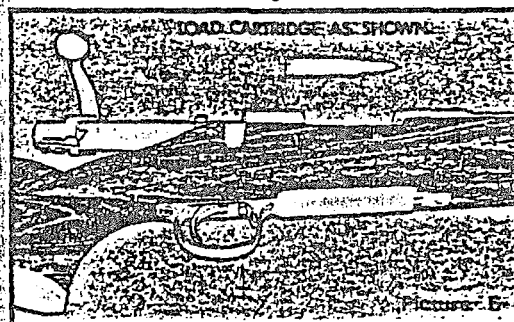



## TO UNLOAD THE FIREARM

There are two types of Model 700 rifles, one with a FLOOR PLATE and one without a FLOOR PLATE.

### INSTRUCTIONS FOR THE MODELS WITH A FLOOR PLATE

1. Point the muzzle in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.
6. Hold the cartridge and remove it from the firearm.
7. Put your hand under the floor plate.
8. Push the floor plate latch to release the floor plate. See picture 7.
9. The magazine spring and follower will be released from the magazine.
10. Remove released cartridges.
11. Push in the magazine follower, then close the floor plate.

**WARNING:** Make sure there are no cartridges in the chamber or magazine.

### INSTRUCTIONS FOR THE MODELS WITHOUT A FLOOR PLATE


1. Point the muzzle in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.
6. Hold the cartridge and remove it from the firearm.

7. Keep the muzzle pointed up, push the bolt handle slowly forward until the cartridge is released from the magazine. **CAUTION:** The cartridge may slide into the chamber. If the bolt is pushed too far forward, See note below.

8. Pull the bolt handle fully back and remove the cartridge from the ejection port.
9. Repeat this action until the magazine is empty.

**WARNING:** Check the chamber and the magazine to make sure there are no cartridges in the firearm.

**NOTE:** If the bolt is pushed all the way forward, and a cartridge slides into the chamber, the gun can be fired. Normally, the cartridges will slide out of the chamber when the bolt is pulled back. If the cartridge remains in the chamber, point the muzzle in a safe direction, slide the bolt forward all the way and push the bolt handle down to lock the bolt. Then repeat steps 2 through 9 above.

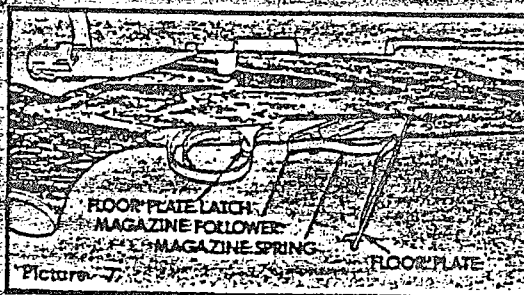

8

HOW TO ORDER PARTS AND SERVICE  
CLEANING INSTRUCTIONS  
HOW TO LOAD AND UNLOAD


## TO ADJUST THE SIGHTS



The sights are adjusted at the factory to hit a target at 100 yards. NOTE: For all models except the Varmint and Classic Grade.

### TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target.

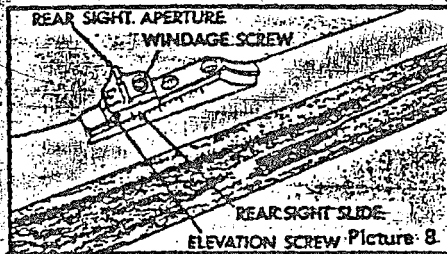

NOTE: For more information on ballistics and trajectory, see the REMINGTON catalog.

### TELESCOPIC SIGHTS

The top of the receiver has holes for the installation of telescopic sights.

9

## POSITION ON TARGET



Bullet hits above the center.

- Loosen the elevation screw on the rear sight.
- Slide the rear sight down (backward) on the ramp.
- Tighten the elevation screw.



Bullet hits below the center.

- Loosen the elevation screw on the rear sight.
- Slide the rear sight up (forward) on the ramp.
- Tighten the elevation screw.



Bullet hits to the left.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the right.
- Tighten the windage screw.



Bullet hits to the right.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the left.
- Tighten the windage screw.



## TO ASSEMBLE THE SLING STRAP

See picture 9 for the location of parts:

1. Slide the strap through the band.
2. Push the strap up through the first swivel.
3. Slide the strap back through the band.
4. Push the strap into and through the buckle.
5. Push the strap down and through the second swivel.
6. Align the slots in the strap and fasten with the brass fastener.


## TO ATTACH THE SLING STRAP ASSEMBLY TO THE STOCK.

See picture 9 for location of parts:

7. Push plunger on swivel until the small plate lifts and is free of the stud.
8. Push the stud into the center of the swivel screw.
9. Close the plate on the swivel to lock the swivel to the swivel screw.
10. To adjust the length of the strap, pull the strap through the buckle.

## TO REMOVE THE SLING FROM THE STOCK

To remove the sling strap assembly from the stock repeat step 7.

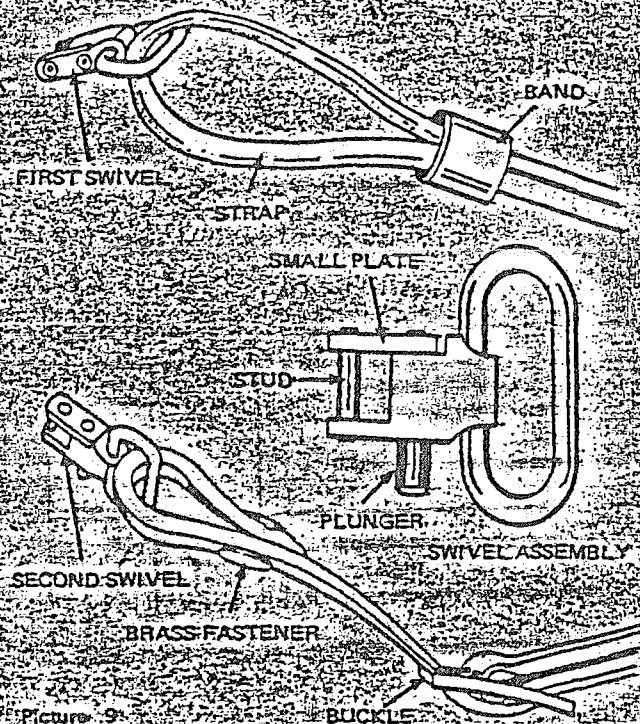

Picture 9

## LUBRICATION AND MAINTENANCE



### TO CLEAN THE BARREL

**WARNING:** Check the chamber and magazine to make sure there are no cartridges in the firearm.

1. Use the equipment provided in a good cleaning kit.
2. Remove the bolt assembly. See Instructions on Page 5.
3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

**NOTE:** Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.
8. Push a clean patch saturated with DuPont Teflon Wet Lubricant through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of DuPont Teflon Wet Lubricant to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

**WARNING:** This firearm should be checked periodically by the Remington Arms Company, Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will insure proper inspection and any necessary replacement of worn or damaged parts.



# TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

## TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

1. Put safety switch to "S" position.
2. Remove the bolt assembly. See instructions on Page 5.
3. Turn the rifle upside down.
4. Remove the screws from the trigger guard. See Picture 10.
5. Lift the stock away from the receiver and trigger assembly.



### MODELS WITHOUT A FLOOR PLATE:

Remove the magazine spring and follower from the receiver.

**NOTE:** Clean the receiver and trigger assembly as a unit with DuPont Teflon Wet Lubricant only.

6. Spray the receiver and the four points of the trigger assembly with DuPont Teflon Wet Lubricant (See Picture 11). Let stand for 15 minutes. Spray again to wash off components. Shake off excess lubricant.

**WARNING:** Excessive use of a non recommended lubricant could cause serious function problems possibly leading to accidental firing.

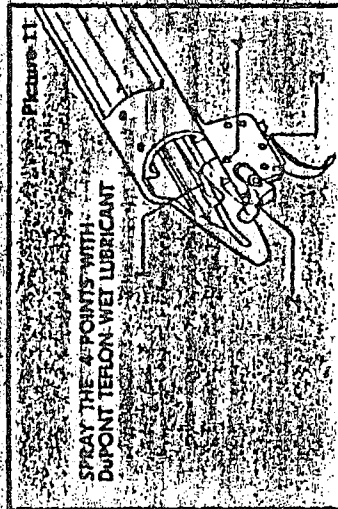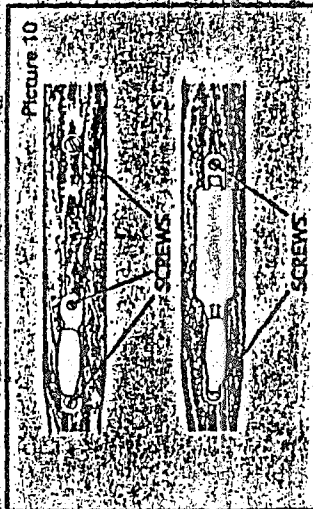

## TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

### TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

1. Put the magazine follower and the spring into the magazine.
2. Put the stock over the receiver and trigger assembly.
3. Replace and tighten the screws on the trigger guard.

**WARNING:** Before you replace the bolt assembly, make sure the barrel is free of obstructions.

4. Replace the bolt assembly. See Instruction on Page 5.

**WARNING:** After cleaning the trigger assembly, check the chamber and magazine to make sure there are no cartridges in the firearm. Put the safety switch in the "F" position. Close the bolt smartly. The firing pin must remain cocked. To check, pull the trigger. The firing pin must fall. Repeat the test at least ten times. If the firing pin will not remain cocked when the bolt is closed smartly, return the firearm to the factory, or a REMINGTON RECOMMENDED GUNSMITH.

### TO ASSEMBLE THE MODELS WITH A FLOOR PLATE

1. Put the magazine all the way into the bottom of the receiver.
2. Assemble the trigger guard assembly on the stock.
3. Put the stock over the receiver and trigger assembly.
4. Replace and tighten the trigger guard screws.

5. Close the Floor Plate.

**WARNING:** Before you replace the bolt assembly, make sure the barrel is free of obstructions.

6. Replace the bolt assembly. See Instruction on Page 5.

**WARNING:** After cleaning the trigger assembly, check the chamber and magazine to make sure there are no cartridges in the firearm. Put the safety switch in the "F" position. Close the bolt smartly. The firing pin must remain cocked. To check, pull the trigger. The firing pin must fall. Repeat the test at least ten times. If the firing pin will not remain cocked when the bolt is closed smartly, return the firearm to the factory, or a REMINGTON RECOMMENDED GUNSMITH.

### CLEANING FREQUENCY

1. Before and after long term storage.
2. If the rifle has been subjected to adverse conditions; such as, shooting in the rain, snow, sleet, or in salt water areas.
3. If the rifle is exposed to dirty conditions; such as, laying on the ground outdoors, dropped in mud, etc.



## INSTRUCTIONS FOR CLEANING THE BOLT ASSEMBLY

### TO DISASSEMBLE THE BOLT FOR CLEANING

1. Remove the bolt assembly from the firearm. See Instruction on Page 5.
2. Put the notch on the firing pin head over a metal edge. Pull the bolt assembly away from the firing pin. Put a coin into the slot near the back edge of the firing pin head. See Picture 12.
3. Hold the bolt assembly and turn the bolt plug counter clockwise until the firing pin assembly can be removed from the bolt assembly.

**CAUTION:** Clean the firing pin assembly as a unit.

4. Clean all parts with gun cleaning solvent. Dry with a clean cloth.



5. Apply a thin coat of DuPont Teflon Wet Lubricant.

### TO ASSEMBLE

1. Put the firing pin assembly into the rear of the bolt assembly.
2. Tighten the bolt plug into the bolt assembly with your hand.
3. Pull the coin from the slot in the firing pin head.
4. Turn the bolt plug until the firing pin head goes into the small notch on the rear rim of the bolt. The bolt is now cocked. See Picture 13.

**NOTE:** The bolt must be cocked to be assembled into the rifle.

5. Assemble the bolt assembly into the rifle. See Instructions on Page 5.

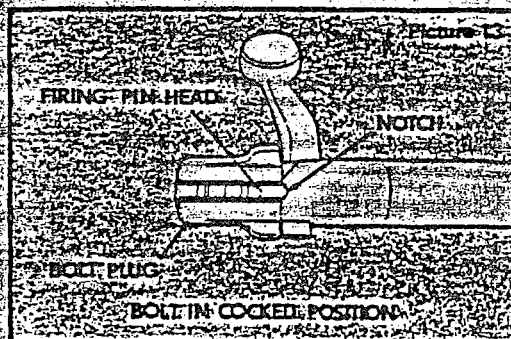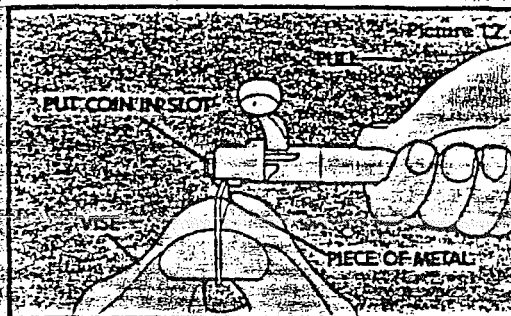

## HOW TO ORDER PARTS FROM THE REMINGTON FACTORY

### TO ORDER PARTS:

1. Use the picture on page 16 to find the correct part name and number.
2. Write the model and serial number of your firearm, and the part name and number on the parts order.
3. Send parts order to:

Arms Service Division  
Remington Arms Company, Inc.  
Illion, New York 13357

4. We can ship your order on a C.O.D. basis or provide an estimate of your required remittance.

NOTE: Bolts, barrels or receivers for centerfire rifles, pistols and rimfire rifles are not sold separately. Repairs or replacements for these parts must be done by Remington Arms Company, Inc. Barrels and bolts for shotguns are available as parts.

**WARNING:** Use only Remington parts in Remington firearms.

### TO ORDER FACTORY SERVICE:

Write a short description of the problem.

1. Give the model and serial number. Make a copy of this note. Attach the original note to the firearm, and put the copy in an envelope attached to the outside of the shipping box.
2. Make sure the gun is unloaded. Never include any ammunition in the package with the firearm.
3. Send by either United Parcel Service or Parcel Post. NOTE: Make sure the gun is unloaded, and there is no ammunition in the box.
4. Get insurance for the firearm.
5. Record serial number, it is required when calling factory to inquire if firearm has been received for repairs.

### INSTRUCTION BOOKS:


To get instruction books for any Remington firearm, write to Remington Arms Company, Inc., Arms Service Division, Illion, New York 13357. Give the model, serial number, gauge or caliber.

### REMINGTON RECOMMENDED GUNSMITHS:

A listing is available from Remington Arms Company, Inc. 939 Barnum Avenue, Bridgeport, Conn. 06801.



**MODEL 700**  
Bolt Action Center Fire Rifle

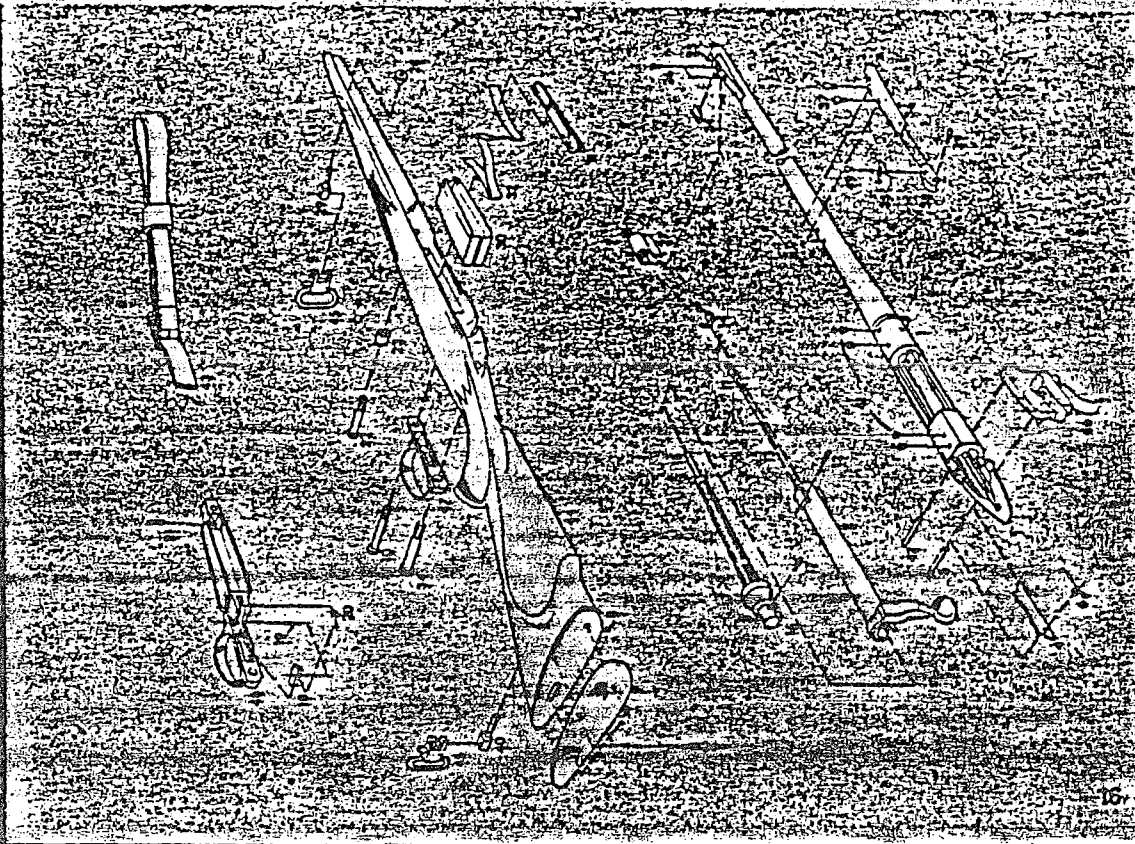

HOW TO ORDER PARTS AND SERVICE

# MODEL 700 - PARTS LIST

PARTS SUBJECT TO CHANGE WITHOUT NOTICE.  
 FOB Ilion, N.Y.

| View No. | Part No. | NAME                                    | View No. | Part No. | NAME                                 |
|----------|----------|-----------------------------------------|----------|----------|--------------------------------------|
|          |          | NOTE: Basic 30-06 Caliber listed below. | 13       | 17017    | Ejector Spring                       |
|          |          |                                         | 14       | 91816    | Extractor                            |
| 1        |          | Barrel Assembly                         | 15       | 22020    | Firing Pin                           |
| 2        |          | Bolt Assembly                           | 16       | 22043    | Firing Pin Assembly, ADL Grade       |
|          |          | Bolt Final Assembly                     |          | 22040    | Firing Pin Assembly, BDL Grade       |
| 3        | 92510    | Bolt Plug ADL                           | 17       | 17022    | Firing Pin Cross Pin                 |
| 4        | 17012    | Bolt Plug BDL                           | 18       | 15291    | Floor Plate Latch, BDL Grade         |
| 5        | 17013    | Bolt Stop (Restricted)                  | 19       | 16451    | Floor Plate Latch Pin, BDL Grade     |
| 6        | 24475    | Bolt Stop Pin (Restricted)              | 20       | 16452    | Floor Plate Latch Spring, BDL Grade  |
| 7        | 15224    | Bolt Stop Spring (Restricted)           | 21       | 16453    | Floor Plate Pivot Pin, BDL Grade     |
| 8        | 90953    | Butt Plate                              | 22       | 22035    | Front Guard Screw                    |
| 9        | 90954    | Butt Plate Spacer, BDL Grade            | 23       | 15181    | Front Guard Screw Bushing, ADL Grade |
| 10       | 25380    | Butt Plate Screw                        | 24       | 15373    | Front Sight                          |
| 11       | 15287    | Center Guard Screw, ADL Grade           |          | 15719    | Front Sight (Low)                    |
| 12       | 17017    | Ejector                                 | 25       | 28510    | Front Sight Ramp                     |
|          | 17676    | Ejector Pin                             |          | 15635    | Front Sight Ramp, BDL Grade          |
| 17       |          |                                         | 26       | 23505    | Front Sight Ramp Screw               |



| View No. | Part No. | NAME                                   | View No. | Part No. | NAME                                      |
|----------|----------|----------------------------------------|----------|----------|-------------------------------------------|
| 27       | 15363    | Front Sight Hood, BDL Grade            | 37       | 28505    | Rear Sight Base Screw (2)                 |
| 28       | 15358    | Front Swivel Screw                     | 38       | 90905    | Rear Sight Slide                          |
|          | 90957    | Grip Cap, BDL Grade (not shown)        | 39       | 90906    | Elevation Screw                           |
|          | 25380    | Grip Cap Screw                         | 40       | 15358    | Rear Swivel Screw                         |
|          | 90958    | Grip Cap Spacer, BDL Grade (not shown) | 41       | 17034    | Receiver Plug Screw                       |
| 30       | 15284    | Magazine, ADL Grade                    | 42       | 24476    | Sear Pin (Restricted)                     |
|          | 16430    | Magazine, BDL Grade (not shown)        | 43       | 30855    | Sling Strap Assembly, BDL Grade           |
| 31       | 92492    | Magazine Follower, ADL                 |          | 26990    | Sling Strap Assembly & Mountings Comp     |
|          | 91017    | Magazine Follower, BDL                 | 44       | 100021   | Stock Assembly, ADL Grade                 |
|          | 15940    | Magazine Tab Screw, ADL Grade          |          | 33371    | Stock Assembly, BDL Grade                 |
| 32       | 17028    | Magazine Spring                        |          | 18186    | Stock Reinforcing Screw (not shown)       |
|          | 15677    | Magazine Spring, BDL Grade             |          | 16970    | Stock Reinforcing Screw Dowel (not shown) |
| 33       | 17029    | Main Spring                            |          |          |                                           |
| 34       | 26365    | Rear Guard Screw                       | 45       | 26555    | Swivel Assembly, BDL Grade (Q.D.)         |
| 35       | 32510    | Rear Sight Aperture                    |          | 26990    | Sling Strap Assembly & Mountings Comp     |
|          | 32524    | Rear Sight Assembly                    | 46       | 26345    | Trigger Assembly (Restricted)             |
| 36       | 91595    | Rear Sight Base                        | 47       | 15281    | Trigger Guard                             |

| View No. | Part No. | NAME                                      | View No. | Part No. | NAME                                 |
|----------|----------|-------------------------------------------|----------|----------|--------------------------------------|
| 484      | 26371    | Trigger Guard Assembly BDL Grade          |          | 22041    | Firing Pin Assembly 222 Rem. 42 Rem. |
| 48       | 90904    | Windage Screw                             |          |          | 243 Win. 308 Win. 6mm Rem. 22-250    |
|          |          | ADDITIONAL CALIBERS                       |          | 22037    | Front Guard Screw 222 Rem. 223 Rem.  |
|          |          | See 30-06 list for parts not listed below |          |          | 243 & 308 Win. 6mm Rem. 22-250       |
|          |          | Barrel Assembly                           |          | 14859    | Front Sight 7mm Rem Mag. 264 Win.    |
|          | 91837    | Extractor 7mm Rem. Mag. 264 300 Win.      |          | 28511    | Front Sight Ramp ADL Grade           |
|          |          | Mag. 6mm Rem. Mag.                        |          | 15992    | Front Sight Ramp BDL Grade           |
|          | 91906    | Extractor 222-223 Rem. 17 Rem.            |          | 15282    | Magazine ADL Grade 222 Rem. 223 17   |
|          | 22021    | Firing Pin 222 Rem. 243 308 Win. 6mm      |          | 16716    | Magazine BDL Grade 222 Rem. 223 17   |
|          |          | Rem. 22-250 Rem. 223 Rem. 17 Rem.         |          |          | Rem. 22-250 Rem. 223 17              |
|          |          | Rem. 17 Rem.                              |          | 15283    | Magazine ADL Grade 243 & 308 6mm     |
|          | 22042    | Firing Pin Assembly 222 Rem. 17 Rem.      |          |          | Rem. 22-250 Rem.                     |
|          |          | 243 Win. 308 Win. 6mm Rem. 22-250         |          | 16715    | Magazine BDL Grade 243 & 308 6mm     |
|          |          | Rem. ADL Grade                            |          |          | Rem. 22-250 Rem.                     |



| View No. | Part No. | NAME                                             | View No. | Part No. | NAME                                                                |
|----------|----------|--------------------------------------------------|----------|----------|---------------------------------------------------------------------|
|          | 92508    | Magazine Follower, 222 ADL                       |          | 17891    | Magazine Spring, 243 & 308 Win., 6mm                                |
|          | 90951    | Magazine Follower, 222 Rem., BDL                 |          |          | Rem.                                                                |
|          | 92455    | Magazine Follower, 243, 308, 6mm, 22-250 ADL     |          | 15598    | Magazine Spring, 22-250 Rem., 6mm                                   |
|          |          |                                                  |          |          | Rem., 243 Win., BDL Grade.                                          |
|          | 90982    | Magazine Follower, 243 & 308 Win., 6mm           |          | 17058    | Main Spring, 222 Rem., 223 Rem., 308                                |
|          |          | Rem., 22-250 Rem., BDL                           |          |          | Win., 17 Rem.                                                       |
|          | 90951    | Magazine Follower, 223, 17 Rem., BDL             |          | 90949    | Recoil Pad, 7mm Rem. Mag., 264 & 300                                |
|          | 91017    | Magazine Follower, 270, 25-08, 30-08 (BDL Grade) |          |          | Win. Mag., 8mm Rem. Mag.                                            |
|          | 90952    | Magazine Follower, 8mm Rem. Mag., BDL Grade      |          | 25410    | Recoil Pad Screw, 7mm Rem. Mag., 264 & 300 Win. Mag., 8mm Rem. Mag. |
|          | 15286    | Magazine Spacer, 222 Rem., BDL Grade             |          | 100022   | Stock Assembly, 7mm Rem. Mag., ADL Grade                            |
|          | 15742    | Magazine Spacer, 222 Rem., ADL Grade             |          | 100020   | Stock Assembly, 222 Rem., 243 Win., 308                             |
|          | 15286    | Magazine Spacer, 223 Rem., BDL Grade             |          |          | Win., 6mm Rem., 22-250 Rem., ADL Grade                              |
|          |          | 17 Rem.                                          |          | 33365    | Stock Assembly, 222 Rem., 243 Win., 308                             |
|          | 91133    | Magazine Spring, 222 Rem., 223 Rem., 17 Rem.     |          |          | Win., 6mm Rem., 22-250 Rem., ADL Grade                              |

| View No. | Part No. | NAME                                      | View No. | Part No. | NAME                                      |
|----------|----------|-------------------------------------------|----------|----------|-------------------------------------------|
|          | 33385    | Stock Assembly 7mm Rem Mag 284            |          | 33376    | Stock Assembly 222 Rem 223 Rem            |
|          |          | 300 Win Mag BDL Grade 8mm Rem             |          |          | 243 Win 6mm Rem 22-250 Rem                |
|          |          | Mag                                       |          | 33375    | Stock Assembly 25-06                      |
|          | 33370    | Stock Assembly 222 Rem 243 Win 308        |          |          | MODEL 700 CLASSIC                         |
|          |          | Win 6mm Rem 22-250 Rem BDL                |          |          | See 30-06 list for parts not listed below |
|          |          | Grade 12 Rem                              |          |          | Barrel Assembly                           |
|          | 26370    | Trigger Guard Assembly BDL Grade 222      |          | 91544    | Recoil Pad 22-250 Rem 243 Win 6mm         |
|          |          | Rem 17 Rem 223 Rem 243 Win                |          |          | Rem 270 Win 30-06                         |
|          |          | 308 Win 6mm Rem 22-250 Rem                |          | 91556    | Recoil Pad 7mm Rem Mag                    |
|          |          | MODEL 700 VARMINT                         |          | 25410    | Recoil Pad Screw                          |
|          |          | See 30-06 list for parts not listed below |          | 34591    | Stock Assembly 270 Win 30-06              |
|          |          | Barrel Assembly                           |          | 34590    | Stock Assembly 22-250 Rem 6mm             |
|          | 16204    | Front Scope Base                          |          |          | Rem 243 Win                               |
|          | 18843    | Rear Scope Base                           |          | 34592    | Stock Assembly 7mm Rem Mag                |
|          | 16205    | Scope Base Screw Front                    |          |          |                                           |
|          | 18842    | Scope Base Screw Rear                     |          |          |                                           |



Congratulations on your choice of a Remington. With proper care, it should give you many years of dependable use and enjoyment.

For best results, we recommend that you use Remington Ammunition — the ammunition used in factory testing your firearm against our exacting function and performance standards.

*Remington.*



Remington is a trademark registered in the United States Patent  
and Trademark Office by Remington Arms Company, Inc.  
Hartford, Connecticut 06101.

Form RPS-5-67