

Copy of what was sent to customer 11/14/89

THE BOLT ASSI



TO INSTALL THI

*Put it Paper
with arrows
Policy*

THE BARREL

The

I.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.

II

- 1.
- 2.
- 3.

III

Befo
free

THE TRIGGER ASSEMBLY

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.



Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



NEVER put your finger on the trigger unless you are going to fire the firearm.