

to

EMINGTON Model 700

When you close the bolt
Rifle will discharge at times

Other times it will just
click on shell

55

Repair Return to

Dennis F. Moore

RD #2 Box 104 B

Proctor W. Va. 26055