

7D-49-8
REMINGTON ARMS COMPANY, INC.

INTER-DEPARTMENTAL CORRESPONDENCE

Remington
REMINGTON

PETERS
PETERS

XC:

J.P. Glas
R.B. Sperling
F.T. Millener
P.H. Holmberg
W.H. Forson, Jr.
C.B. Workman
T.L. Capeletti
J.W. Brooks

"CONFINE YOUR LETTER TO ONE SUBJECT ONLY" _____

Hion, New York
October 27, 1981

MODEL 700

INSTRUCTION BOOKS REVISIONS

Attached is a revised copy of Page 4 for the M/700 Instruction Books as sent to you with cover letter dated October 1, 1981. This revision has been approved by Legal, and replaces the copy of Page 4 you now have.

Your prompt review and/or comments will be appreciated by November 5, 1981, after which time it will be assumed that the instructions meet with your approval and printing will commence.


R.L. Sassone, Supervisor

Project Control & Administrative Services


By: R.L. Smithson

RLS:m
Firearms Research Division
Attach.

R2511243

CURRENT

IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position when the firearm is loaded and not ready for firing.

X The bolt handle cannot be lifted when the safety switch is in the "S" position. See picture 3.

 
 
When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.



Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

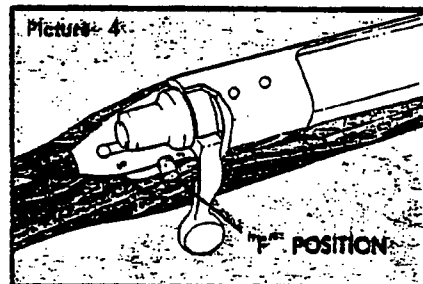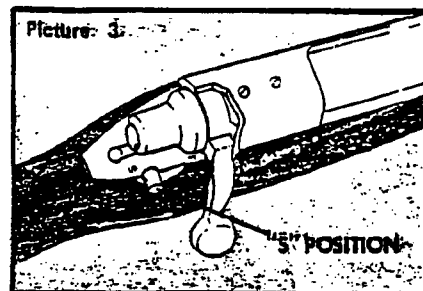

PROPOSED

IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position when the firearm is loaded and not ready for firing.

X Before moving the bolt handle, always put the safety switch in the "S" position.

When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.



Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

