

## OPERATION OF THE SAFETY

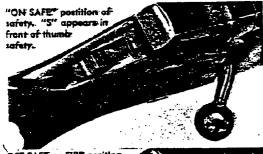

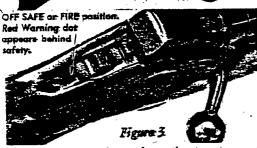

The safety is located on the top tang at the rear of the receiver. When the safety is drawn to the rear, the gun is "ON SAFE" with the trigger blocked and the bolt locked in a closed position. In this position an "S" will appear in front of the safety.


When the safety is pushed forward, the "S" will be covered and a red dot will appear indicating that the rifle is OFF SAFE and ready to fire. Whenever a cartridge is chambered, the rifle should be kept "ON SAFE" until you desire to fire it.

## TO DRAW THE BOLT REARWARD

CAUTION: The safety must be in the OFF SAFE position, whenever you wish to draw the bolt rearward. Therefore, exercise extreme caution whenever you are operating the bolt. In accordance with gun safety always assume your rifle is loaded, and be sure your muzzle is pointed in a safe direction when you operate the bolt.

## COCKING INDICATOR

Below the bolt shroud and ahead of the safety will be found a serrated cocking indicator. This indicator is painted red. When the rifle is cocked it may be readily felt and seen. When the rifle is fired, the cocking indicator retracts into the bolt shroud and cannot be felt. (See Figure 4.)

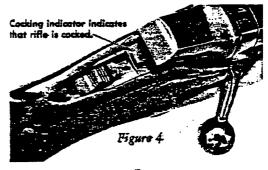

7