

THE BOLT ASSEMBLY

View No.	Part No.
42	24478
43	30885
44	28990
45	33388
46	33377
47	18186
48	18970
49	28585
50	28345
51	15281
52	28377
53	90804
54	
55	
56	
57	
58	
59	
60	
61	
62	
63	
64	
65	
66	
67	
68	
69	
70	
71	
72	
73	
74	
75	
76	
77	
78	
79	
80	
81	
82	
83	
84	
85	
86	
87	
88	
89	
90	
91	
92	
93	
94	
95	
96	
97	
98	
99	
100	



The bolt assembly locks the cartridge into the chamber.


TO INSTALL THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Align the lugs on the bolt assembly with the receiver. See picture 5.
4. Slide the bolt assembly into the receiver and push all the way in.
5. To lock the bolt assembly into position push the bolt handle down.

TO REMOVE THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Do not touch the trigger while moving the safety switch.
4. Raise the bolt handle.
5. Put the safety switch in the "S" position.
6. Pull the bolt handle all the way back.
7. Push the bolt stop release. See picture 5.
8. As you push the bolt stop release, slide the bolt from the firearm.


5

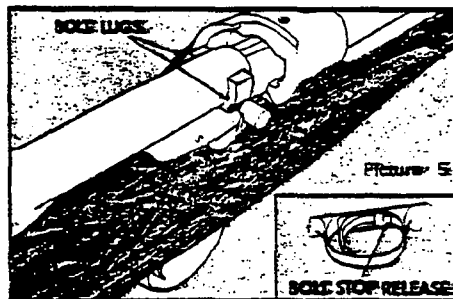

THE TRIGGER ASSEMBLY

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.

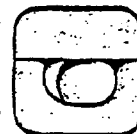

Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



NEVER put your finger on the trigger unless you are going to fire the firearm.