
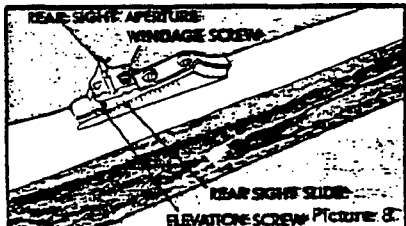






View No.	F	TO ADJUST THE SIGHTS	POSITION ON TARGET	ADJUSTMENTS
425	24	 <p>The sights are adjusted at the factory to hit a target at 100 yards. NOTE: For all models except the Varmint and Classic Grade.</p> <p>TO ADJUST THE REAR SIGHT Move the rear sight in the same direction as you need to move the bullet on the target.</p>  <p>NOTE: For more information on ballistics and trajectory, see the REMINGTON catalog.</p> <p>TELESCOPIC SIGHTS The top of the receiver has holes for the installation of telescopic sights.</p>	 <p>Bullet hits above the center.</p>	<ol style="list-style-type: none"> Loosen the elevation screw on the rear sight. Slide the rear sight down (backward) on the ramp. Tighten the elevation screw.
435	30		 <p>Bullet hits below the center.</p>	<ol style="list-style-type: none"> Loosen the elevation screw on the rear sight. Slide the rear sight up (forward) on the ramp. Tighten the elevation screw.
445	28		 <p>Bullet hits to the left.</p>	<ol style="list-style-type: none"> Loosen the windage screw on the rear sight. Slide the rear sight aperture to the right. Tighten the windage screw.
445	33		 <p>Bullet hits to the right.</p>	<ol style="list-style-type: none"> Loosen the windage screw on the rear sight. Slide the rear sight aperture to the left. Tighten the windage screw.
445	18			
445	16			
445	26			
445	26			
445	90			
918				
909				
220				
220				