¹ To assemble the sling strap


See picture 9 for the location of parts:

- Slide the strap through the band.
 Push the strap up through the first swivel.
- Slide the strap back through the band.
- 4. Push the strap into and through the buckle.
 5. Push the strap down and through the second
- swivel.
- Align the slots in the strap and fasten with the brass fastener.

ATTACH THE SLING STRAP ASSEMBLY THE STOCK.

ure 9 for location of parts:

- rush plunger on swivel until the small plate lifts and is free of the stud.
- Push the stud into the center of the swivel screw. Close the place on the swivel to lock the swivel to the swivel screw.
- To adjust the length of the strap, pull the strap through the buckle.
- TO REMOVE THE SLING FROM THE STOCK To remove the sling strap assembly from the stock repeat step 7.

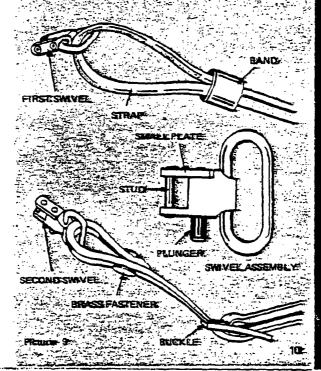

HOW TO DROER PARTS AND SERVICE CLEANING INSTRUCTIONS

R2511541