

### TO CLEAN THE ACTION

1. Remove the bolt assembly. See page 5.
2. Turn the rifle upside down.
3. Remove the screws from the trigger guard. See picture 12, or picture 13.
4. Lift the stock away from the action.

**NOTE: MODELS WITHOUT A FLOOR PLATE:**  
Remove the magazine spring and follower from the magazine.

**NOTE: MODELS WITH A FLOOR PLATE:**  
Remove the magazine spring and follower from the receiver.

Clean the action with a gun cleaning solvent and dry with a cloth.  
Apply a thin coat of oil to prevent rust.

### TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

1. Put the magazine follower and the spring into the magazine.
2. Put the stock over the action.
3. Replace and tighten the screws on the trigger guard.
4. Replace the bolt assembly.

### TO ASSEMBLE THE MODELS WITH A FLOOR PLATE

1. Put the magazine all the way into the bottom of the receiver.
2. Assemble the trigger guard assembly on the stock.
3. Put the stock over the action.
4. Replace and tighten the trigger guard screws.
5. Replace the bolt assembly.

