

| View No. | F  |
|----------|----|
| 42       | 24 |
| 43       | 30 |
| 44       | 26 |
| 45       | 33 |
| 46       | 33 |
| 47       | 18 |
| 48       | 16 |
| 49       | 26 |
| 50       | 26 |
| 51       | 15 |
| 52       | 26 |
| 53       | 90 |
| 54       | 90 |
| 55       | 90 |
| 56       | 90 |
| 57       | 90 |
| 58       | 90 |
| 59       | 90 |
| 60       | 90 |
| 61       | 90 |
| 62       | 90 |
| 63       | 90 |
| 64       | 90 |
| 65       | 90 |
| 66       | 90 |
| 67       | 90 |
| 68       | 90 |
| 69       | 90 |
| 70       | 90 |
| 71       | 90 |
| 72       | 90 |
| 73       | 90 |
| 74       | 90 |
| 75       | 90 |
| 76       | 90 |
| 77       | 90 |
| 78       | 90 |
| 79       | 90 |
| 80       | 90 |
| 81       | 90 |
| 82       | 90 |
| 83       | 90 |
| 84       | 90 |
| 85       | 90 |
| 86       | 90 |
| 87       | 90 |
| 88       | 90 |
| 89       | 90 |
| 90       | 90 |
| 91       | 90 |
| 92       | 90 |
| 93       | 90 |
| 94       | 90 |
| 95       | 90 |
| 96       | 90 |
| 97       | 90 |
| 98       | 90 |
| 99       | 90 |
| 100      | 90 |

### TO ADJUST THE SIGHTS

The sights are adjusted at the factory to hit a target at 100 yards. NOTE: For all models except the Varmint and Classic Grade.

#### TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target.

NOTE: For more information on ballistics and trajectory, see the REMINGTON catalog.

#### TELESCOPIC SIGHTS

The top of the receiver has holes for the installation of telescopic sights.

| POSITION ON TARGET                | ADJUSTMENTS   |
|-----------------------------------|---|
| <br>Bullet hits above the center. | a. Loosen the elevation screw on the rear sight.<br>b. Slide the rear sight down (backward) on the ramp.<br>c. Tighten the elevation screw. |
| <br>Bullet hits below the center. | a. Loosen the elevation screw on the rear sight.<br>b. Slide the rear sight up (forward) on the ramp.<br>c. Tighten the elevation screw.    |
| <br>Bullet hits to the left.      | a. Loosen the windage screw on the rear sight.<br>b. Slide the rear sight aperture to the right.<br>c. Tighten the windage screw.           |
| <br>Bullet hits to the right.     | a. Loosen the windage screw on the rear sight.<br>b. Slide the rear sight aperture to the left.<br>c. Tighten the windage screw.            |