

INSTRUCTIONS FOR REMOVAL OF BARREL IF PISTON ASSEMBLY BINDS IN  
MAGAZINE TUBE

CAUTION: Piston assembly should remain attached to barrel assembly  
when barrel assembly is removed.

IF PISTON ASSEMBLY BINDS IN MAGAZINE TUBE, EXTREME CAUTION MUST BE  
USED TO PREVENT INJURY.

1. Point the firearm in a safe direction.
2. Before removing the barrel assembly, make sure that the piston  
retainer is in position. See picture 10 on page 10.
3. If piston retainer is in position, pull on barrel assembly until  
piston assembly is free.
4. If the piston retainer is NOT in position:
  - a. KEEP THE MUZZLE POINTED IN A SAFE DIRECTION UNTIL THE  
PISTON IS REMOVED.
  - b. DO NOT remove the barrel until the piston is free and  
moves with the barrel.
  - c. Grasp the barrel securely and push rearward into the  
receiver.
  - d. Using a  $\frac{1}{4}$ " diameter rod push the end of the piston  
fully rearward and release. Repeat this procedure  
until the piston is free.

NOTE: If unable to free the piston replace the magazine cap and  
take the firearm to a REMINGTON RECOMMENDED GUNSMITH.

- e. Remove the barrel and piston as a unit. USE EXTREME  
CAUTION AS PISTON IS UNDER SPRING TENSION.

2-24-81  
Copy

WIL06808