4/7/10

## M/600 SAFETY FUNCTION TEST - PROCEDURE

## UNPACK

Pull staples and open packing case. Record Dealer and Wholesaler on form. Record Serial Numbers on form. Open box, on Safety Bench, remove Rifle (INSPECT FOR LIVE AMD.) Umpack Bolt, Assemble to Rifle, Rifle to Truck. Empty box returned to Case. Number case and truck section with same no. Verify Serial Nos. of guns - match serial nos. on cases.

## INSPECT

rse

Бt

ck

Pick Rifle, inspect for live ammo. Close and lock Bolt. (Pull Safety back to "ON" position. (Pull Trigger, No Click, Trigger retracts. (Push Safety foreward to "OFF" position. (Firing Pin remains cocked. Try 3 times.

1 In addition to passing Worse and Trick Test, .008 shim must go freely between Seer and Trigger when Safety is on.

(Pull Safety back to "ON" position.
(Push Safety helivay off, pull Trigger. (Firing Pin remains cocked, no click, Trigger retracts. (Push Safety lightly, must spring foreward to full "OFF" position, Firing Pin ( remains cocked. Try 3 times

1 In addition to passing Worse and Trick Test, .008 shim must go freely between Sear & Trigger when Safety is on.

## If Rifle fails either test;

Remove Stock, replace Safety with a swaged one, reassemble Safety with a new Safety Pivot Pin and snep washer making certain that snep washer is and stays engaged on both sides.

Repeat both tests - Return passed Rifle to truck and fill out record form. Rejected Rifle, replace entire Trigger Housing assembly to pass tests.

After the gun has been repaired, or when both tests have been tried and passed, the tester will stamp his mark adjacent to the Final Inspection stamp.

Rev. 1

PPENDIX I	<b>.</b>	M/600 - SAFETY FUNCTION TEST		<b>Š</b>	
r or Wholesaler Date					
<u></u>	Warehouse Code	Pasned Worse Test	Passed Trick Test	Repaired	<u>Initials</u>
		·	. •		
			·		· ·
			·		
•					
•			.		- :
	·				
* 			 		
•	·	·		•	
1					
					·
:			•		
			•		
				•	
				-	
!		•			
	·	· ;= , · · · · · · · · · · · · · · · · · ·	· ·		
i i			•		· .
•	-				
·		•	·		
		•			
	1				4