

X

an exploded view
in centerfold of H
manual
NO.

IMPORTANT - The trigger balance (~~view no. 48~~) and trigger balance spring (~~view no. 50~~) are ^{important} ~~integral~~ parts of the trigger mechanism. IF ACTION IS REMOVED FROM STOCK, THE TRIGGER BALANCE AND SPRING MUST BE REPLACED DURING RE-ASSEMBLY.

The trigger balance must be positioned centrally on its pin in the stock. This will enable top of balance to re-enter slot in trigger link easily. Make certain both receiver screws correctly re-enter metal screw escutcheon in stock and tighten action securely.

MAINTENANCE -

IMPORTANT -