


Send all guns for factory service and inquiries on service and parts to
REMINGTON ARMS COMPANY, INC.
 Arms Service Division
 Ilion, New York 13357

All other inquiries are to be addressed to
REMINGTON ARMS COMPANY, INC.
 Bridgeport, Connecticut 06602

MODEL
700
SNIPER

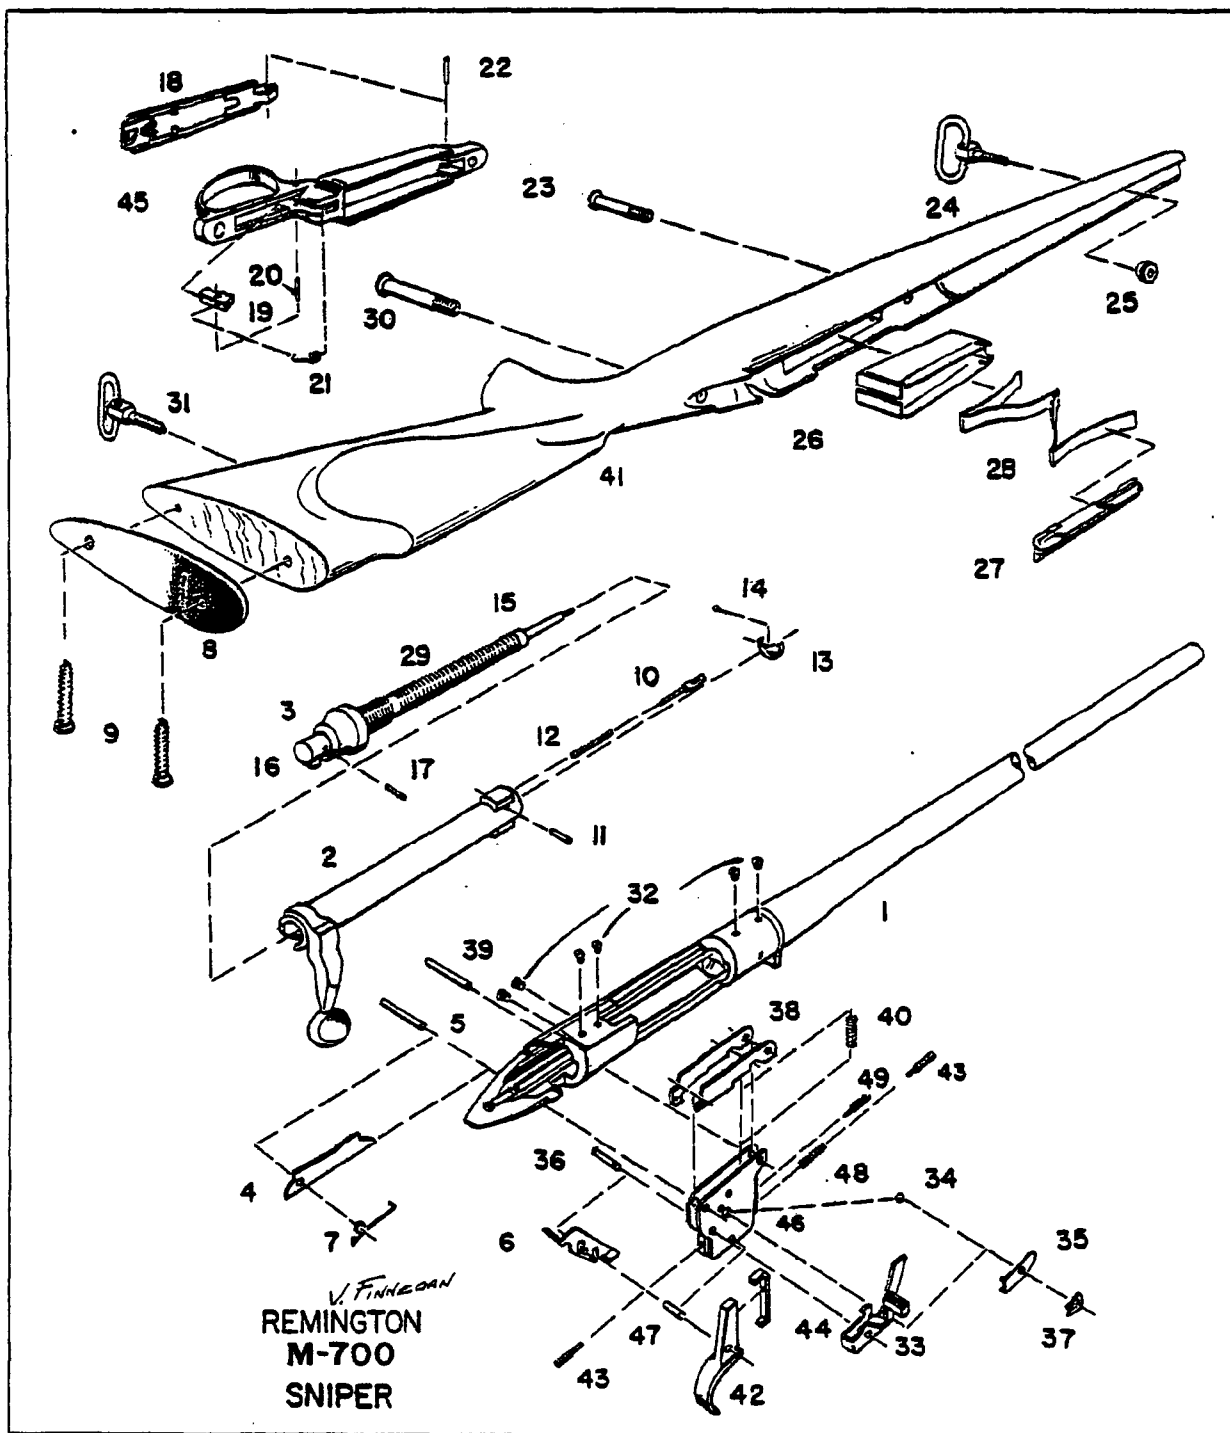

REPLACEMENT PARTS

When ordering parts specify model, caliber, part name and serial number of the gun.

NOTE: The sale of barrel assemblies and breech bolts is restricted. When these parts are needed for replacement, the arm must be returned to the

factory as the use of special tools and gauges is required to assure proper operation. All other parts will be shipped as ordered but, since they are made to close dimensions, the particular part may require slight adjustment or fitting to assure proper functioning of the arm.

COMPONENT PARTS

*Remington***MODEL
700
SNIPER****BOLT ACTION -- HIGH POWER****7.62 NATO CALIBER****When ordering parts — Model No., Part No. and Part Name must be given.**

View No.	Part No.	NAME OF PART	View No.	Part No.	NAME OF PART
1	16860	Barrel Assembly, 7.62 Cal. (includes Barrel, Barrel Bracket, Receiver) _____	30	22036	Rear Guard Screw _____
2	16861	Bolt Assembly (includes Bolt Body Assembly and Bolt Handle) _____	31	22560	Rear Swivel Assembly _____
	16862	Bolt Final Assembly (includes Bolt Assembly, Ejector, Ejector Pin, Ejector Spring, Extractor, Extractor Rivet, Firing Pin Assembly) _____	32	17034	Receiver Plug Screw _____
3	17012	Bolt Plug _____	33	26585	Safety Assembly (includes Safety, Safety Button) _____
4	17013	Bolt Stop _____	34	23222	Safety Detent Ball _____
5	24475	Bolt Stop Pin _____	35	15368	Safety Detent Spring _____
6	15478	Bolt Stop Release _____	36	17043	Safety Pivot Pin _____
7	15224	Bolt Stop Spring _____	37	17044	Safety Snap Washer _____
8	16601	Butt Plate _____	38	26590	Sear and Safety Cam Assembly (includes Safety Cam, Sear) _____
9	25410	Butt Plate Screw _____	39	24476	Sear Pin _____
10	17017	Ejector _____	40	17047	Sear Spring _____
11	17676	Ejector Pin _____	41	16865	Stock Assembly (includes Butt Plate, Butt Plate Screw (2), Stock, Stock Reinforcing Screw, Front Swivel Assembly, Front Swivel Nut, Rear Swivel Assembly) _____
12	17019	Ejector Spring _____		18186	Stock Reinforcing Screw _____
13	16254	Extractor _____	42	15280	Trigger _____
14	27340	Extractor Rivet _____	43	17053	Trigger Adjusting Screw _____
15	22021	Firing Pin _____		26345	Trigger Assembly (includes Bolt Stop Release, Trigger Housing Assembly, Safety Assembly, Safety Detent Ball, Safety Detent Spring, Safety Pivot Pin, Safety Snap Washer, Sear and Safety Cam Assembly, Sear Spring, Trigger, Trigger Adjusting Screw, Trigger Engagement Screw, Trigger Pin, Trigger Spring, Trigger Stop Screw) _____
16	22041	Firing Pin Assembly (includes Bolt Plug, Firing Pin, Firing Pin Cross Pin, Firing Pin Head, Main Spring) _____	44	19461	Trigger Connector _____
17	17022	Firing Pin Cross Pin _____	43	17053	Trigger Engagement Screw _____
18	16434	Floor Plate _____	45	26375	Trigger Guard _____
19	15291	Floor Plate Latch _____		26370	Trigger Guard Assembly (includes Floor Plate, Floor Plate Latch, Floor Plate Latch Pin, Floor Plate Latch Spring, Floor Plate Pivot Pin, Trigger Guard) _____
20	16451	Floor Plate Latch Pin _____	46	26655	Trigger Housing Assembly (includes Trigger Housing Spacer (3), Trigger Side Plate (2) _____
21	16452	Floor Plate Latch Spring _____	47	24477	Trigger Pin _____
22	16453	Floor Plate Pivot Pin _____	48	15400	Trigger Spring _____
23	16859	Front Guard Screw _____	49	15481	Trigger Stop Screw _____
24	16856	Front Swivel Assembly _____			
25	17682	Front Swivel Nut _____			
26	16857	Magazine _____			
27	15667	Magazine Follower _____			
28	15699	Magazine Spring _____			
29	17058	Main Spring _____			

DELIVERIES ARE F.O.B. ILION, N. Y.

PARTS SUBJECT TO CHANGE WITHOUT NOTICE