


The bolt stop located at the left rear of the receiver is of the Mauser type and similar to the Ruger M/77.

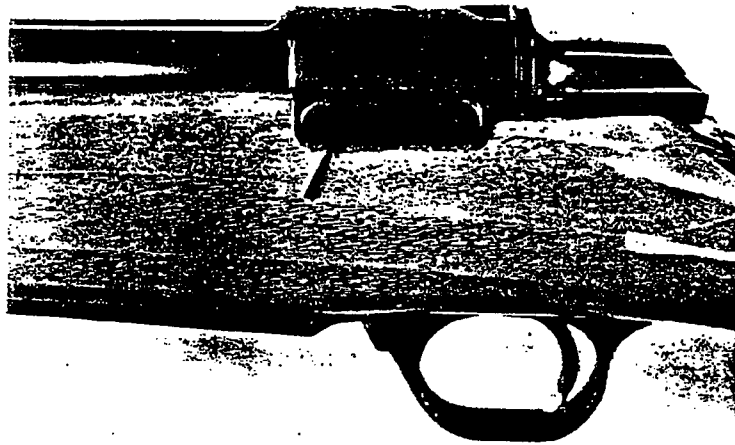

This bolt release must be pushed in on the left side to remove the bolt but need not be touched on re-insertion.