


Fire Control

Winchester makes no mention in their owner's manual concerning trigger adjustments. However, their trigger is adjustable for weight of pull and trigger over-travel. These two adjustments can be made by one screw in combination with three lock nuts that are located at the rear of the trigger and under the receiver tang. This rifle has no trigger housing. The sear and trigger are pinned to the receiver and outside of their accompanying springs are the only parts of the fire control. The sear and trigger engage directly here.

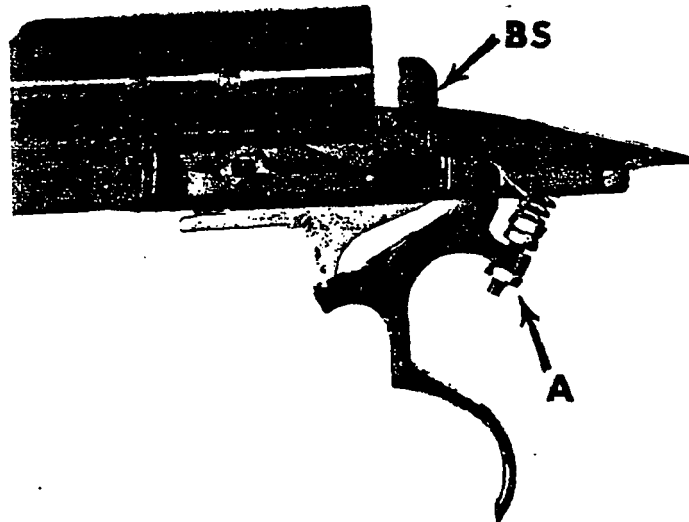

The above picture also shows a better view of the bolt stop and how it operates in the receiver.