

## IMPORTANT PARTS OF THE FIREARM

### THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position when the firearm is loaded and not ready for firing.

The bolt handle cannot be lifted when the safety switch is in the "S" position. See picture 3.



When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Never pull the trigger when the safety switch is in the "S" position.

**WARNING:** The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.

**STOP**

Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

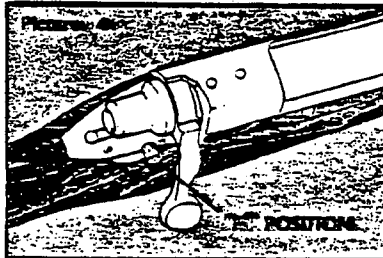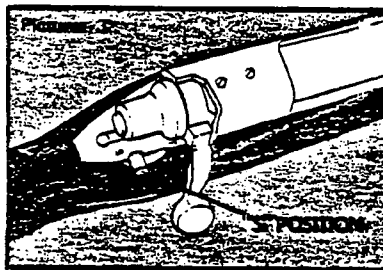

HOW TO ORDER PARTS AND SERVICE  
CLEANING INSTRUCTIONS  
HOW TO LOAD AND UNLOAD  
IMPORTANT PARTS