 


174


1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Align the lugs on the bolt assembly with the receiver. See picture 5.
4. Slide the bolt assembly into the receiver and push all the way in.
5. To lock the bolt assembly into position push the bolt handle down.

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Do not touch the trigger while moving the safety switch.
4. Raise the bolt handle.
5. Put the safety switch in the "S" position.
6. Pull the bolt handle all the way back.
7. Push the bolt stop release. See picture 5.
8. As you push the bolt stop release, slide the bolt from the firearm.

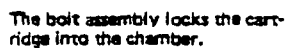

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.

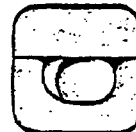

Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



NEVER put your finger on the trigger unless you are going to fire the firearm.