

- 9. Remove released cartridges.
- 10. Push in the magazine follower, then close the floor plate.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

INSTRUCTIONS FOR THE MODELS WITHOUT A FLOOR PLATE:

- 1. Repeat Steps 1 through 6 on page 10.
- 2. Keep the muzzle pointed in a safe direction. Push the bolt handle fully forward until the cartridge is released from the magazine.

CAUTION: The cartridge may slide into the chamber if the bolt is pushed too far forward.
See Note below.

- 3. Pull the bolt handle fully back and remove the cartridge from the ejection port.
- 4. Repeat Steps 2 and 3 until the magazine is empty.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

NOTE: If the bolt is pushed all the way forward and a cartridge slides into the chamber, the gun can be fired. Normally, the cartridges will slide out of the chamber when the bolt is pulled back. If the cartridge remains in the chamber, point the muzzle in a safe direction, slide the bolt forward all the way and push the bolt handle down to close the bolt. Then repeat Steps 1 through 4 above.

INSTRUCTIONS FOR THE MODELS WITH A DETACHABLE MAGAZINE BOX:

- 1. Point the firearm in a safe direction.
- 2. Pull the safety mechanism in the 'S' position.
- 3. Raise the bolt handle.
- 4. Put one hand over the top of the ejection port.
- 5. Slowly pull the bolt handle rearward with your other hand to remove the cartridge from the chamber.
- 6. Depress both latches (Model 700™) or one latch (Model 700™) to release magazine box. See Picture 10 on page 10.
- 7. Remove all the cartridges from the magazine box.
- 8. Replace the magazine box.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

To Adjust Sights


TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target. See Picture 13.

NOTE: For more ballistics and trajectory, see the REMINGTON® catalog.

TELESCOPIC SIGHTS

The top of this receiver has holes for the installation of telescopic sights.

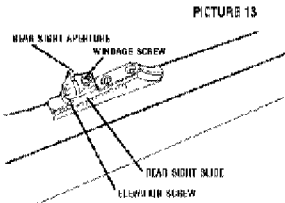

PICTURE 13

Lubrication and Maintenance

When the firearm is to be stored, it should be carefully cleaned and properly oiled. Outside surfaces should be oiled. Apply a light coat of Rem-UMC® occasionally when the firearm is to be stored. All excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Rem-UMC® is available from your local dealer. If your dealer is out of stock, ask him to order it for you from his Remington distributor.



POSITION ON TARGET	ADJUSTMENTS
	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight down (upward) on the ramp. c. Tighten the elevation screw.
	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight up (downward) on the ramp. c. Tighten the elevation screw.
	a. Loosen the windage screw on the rear sight. b. Slide the rear sight operate to the right. c. Tighten the windage screw.
	a. Loosen the windage screw on the rear sight. b. Slide the rear sight operate to the left. c. Tighten the windage screw.