

To Clean the Barrel

WARNING: Check the chamber and magazine to make sure there are no rounds in the firearm.

1. Use the equipment provided in a good cleaning kit. For recommendations, see your REMINGTON® AUTHORIZED GUNSMITH.

2. Remove the bolt assembly. See instructions on page 9.

3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.

4. Put the cleaning brush into the gun cleaning solvent.

NOTE: Barrel should lay horizontally with the ejector pointing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.

6. Remove brush from rod, attach tip with patch, and push through the bore.

7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.

8. Push a clean patch saturated with Rem™ Oil through the barrel.

9. Push a clean dry patch through the barrel to remove excess lubricant.

10. Apply a thin coat of Rem Oil to the outside of the barrel with a soft clean cloth.

11. After cleaning the barrel, clean the receiver and the trigger assembly.

WARNING: This firearm's bolt should be checked periodically by a Remington Arms Company, Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will assure proper operation and any necessary replacement of worn or damaged parts.

To Clean the Receiver and Trigger Assembly

1. Put the safety mechanism in the "S" position.

2. Remove the bolt assembly. See instructions on page 9.

3. Turn the rifle upside down.

4. Remove the stock screws. See Picture 14.

5. Lift the stock away from the receiver and trigger assembly.

MODELS WITHOUT A FLOOR PLATE ONLY

Remove the magazine spring and follower from the receiver.

NOTE: Clean and lubricate the receiver and trigger assembly as a unit.

Do not remove the trigger assembly from the receiver.

6. Thoroughly spray the receiver inside and out with Rem™ Action Cleaner and allow to dry.

7. Thoroughly spray inside the trigger assembly at the four points specified in Picture 15 with Rem Action Cleaner.

8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.

9. Pull and hold the trigger rearward. Then using a small punch or screwdriver depress the sear and release multiple times.

10. Release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times.

11. Again thoroughly spray inside the trigger assembly at the four points specified in Picture 15 with Rem Action Cleaner. Air dry or use compressed air to thoroughly dry the trigger assembly.

12. Push a drop of Rem Oil on each of the four points in the trigger assembly specified in Picture 15.

13. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times. Ensure the trigger returns completely to the forward position each time. **If the trigger does not completely return, reassemble the rifle and return it to a Remington Authorized Service Center.**


WARNING: If the trigger does not fully return to the forward position each time it is released, then your rifle is

NOT in a safe operating condition and it must NOT be used until you have had it inspected by a Remington Authorized Service Center.

MODEL 700™ PICTURE 14



MODEL SEVEN™

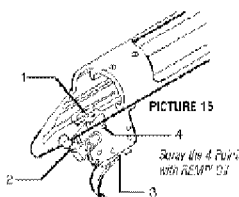

PICTURE 15

Seal the 4 Points with REM™ Oil