

MODEL 700™
Bolt Action Center Fire Rifle
PARTS LIST

VIEW	PART NAME	VIEW	PART NAME
1	Barrel Assembly	30	Magazine, ADL Grade
2	Bolt Assembly		Magazine, BDL Grade (Not Shown)
3	Bolt Plug	31	Magazine Follower, ADL – Short Action
4	Bolt Stop (Restricted)		Magazine Follower, BDL
5	Bolt Stop Pin (Restricted)		Magazine Lock Screw, ADL Grade
6	Bolt Stop Spring (Restricted)	32	Magazine Spring, ADL Grade
7	Butt Plate		Magazine Spring, BDL Grade
	Butt Plate Frame (New Style Not Shown)	33	Main Spring
	Butt Plate Insert (New Style Not Shown)	34	Rear Guard Screw
	Butt Plate Frame Screw (New Style)	35	Rear Sight Aperture
8	Butt Plate Spacer		Rear Sight Assembly
9	Butt Plate Screw		Rear Sight Base
10	Center Guard Screw ADL Grade	37	Rear Sight Base Screw (2)
11	Ejector	38	Rear Sight Slide
12	Ejector Pin	39	Elevation Screw
13	Ejector Spring	40	Rear Swivel Screw
14	Extractor	41	Receiver Plug Screw
16	Firing Pin Assembly	42	Scope Pin (Restricted)
17	Firing Pin Groove Pin	43	Sling Strap Assembly, BDL Grade
18	Floor Plate Latch, BDL Grade		Sling Strap Assembly & Mountings Complete
19	Floor Plate Latch Pin, BDL Grade	44	Stock Assembly, ADL Grade
20	Floor Plate Latch Spring, BDL Grade		Stock Assembly, BDL Grade
21	Floor Plate Pivot Pin, BDL Grade		Stock Reinforcing Screw (Not Shown)
22	Front Guard Screw		Stock Reinforcing Screw Dowel (Not Shown)
23	Front Guard Screw Bushing, ADL Grade	45	Swivel Assembly, BDL Grade (Q.D.)
24	Front Sight	46	Trigger Assembly (Restricted)
	Front Sight (Low)	47	Trigger Guard
25	Front Sight Ramp BDL	48	Trigger Guard Assembly, BDL Grade
26	Front Sight Ramp Screw	49	Windage Screw
27	Front Sight Hood		
29	Front Swivel Screw		
	Grip Cap, BDL Grade (Not Shown)		
	Grip Cap Screw		
	Grip Cap Spacer (Not Shown)		