

MODEL SEVEN™
Bolt Action Center Fire Rifle
PARTS LIST

VIEW	PART NAME	VIEW	PART NAME
1	Barrel Assembly	31	Magazine Spring
2	Bolt Assembly	32	Magazine Spring 222 Cal.
	Bolt Final Assembly	32	Magazine Spring
3	Bolt Plug	33	Rear Sight Screw
4	Bolt Stop (Restricted)	34	Rear Sight Aperture
5	Bolt Stop Pin (Restricted)	35	Rear Sight Assembly
6	Bolt Stop Spring (Restricted)	36	Rear Sight Base
7	Elevation Screw	36	Rear Sight Base Screw (2)
8	Ejector	37	Rear Sight Slide
9	Ejector Pin	38	Rear Sight Screw
10	Ejector Spring	39	Receiver Plug Screw
11	Extractor	40	Recoil Pad
	Extractor 222 Cal.	41	Recoil Pad Screw
12	Firing Pin (Restricted)	42	Seal Pin (Restricted)
13	Firing Pin Assembly	43	Stock Assembly
14	Firing Pin Cross Pin	44	Trigger Assembly (Restricted)
17	Floor Plate Latch	45	Trigger Guard Assembly
18	Floor Plate Latch Spring	46	Windage Screw
19	Floor Plate Latch Pin		
20	Floor Plate Pivot Pin		
21	Front Guard Spring		
22	Front Sight		
	Front Sight (Low)		
23	Front Sight Ramp		
24	Front Sight Ramp Screw		
25	Front Sight Screw		
26	Grip Cap		
	Grip Cap Insert (Not Shown)		
	Grip Cap Screw (Not Shown)		
29	Magazine		
	Magazine 222 Cal.		
30	Magazine Follower		
	Magazine Follower 222 Cal.		
	Magazine Spring 222 Cal.		

SUPERSEDED OR SERVICE PARTS
Floor Plate Base Assembly
Floor Plate Cover Assembly
Floor Plate Latch
Floor Plate Latch Spring
Floor Plate Latch Spring Pin
Floor Plate Pad
Floor Plate Pivot Pin
Front Guard Screw
Stock Assembly, Fiberglass, FS, Gray
Stock Assembly, Fiberglass, FS, Camo
Trigger Guard