

9. Apply a thin coat of Rem Oil to the outside of the barrel with a soft, clean cloth.

Cleaning the trigger plate

1. Engage the safety mechanism.
2. Close the action.
3. Tap out front and rear trigger plate pins.
4. Lift rear of the trigger plate assembly and remove the assembly from the receiver.
5. Spray the trigger plate assembly with Rem Oil as shown. Let stand for 15 minutes. Spray again to wash off components. Shake off excess lubricant.
6. Check to make sure that the end of the disconnecter is below end of left connector.
7. Carefully insert the trigger plate assembly into the receiver.
8. Position to align holes and tap in front and rear trigger plate pins.

*Autoloading action*

Cleaning the barrel

1. First check the chamber and magazine to make sure there are no cartridges in the firearm. It is a good idea to use the instructions and the equipment provided in a good cleaning kit.
2. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
3. Put the cleaning brush into the gun cleaning solvent.
4. Push the cleaning brush through the barrel several times. You should always clean the barrel from the muzzle to the chamber.
5. Remove the brush from the rod, and attach tip with correct size cleaning patch and push through the bore.
6. Repeat several times using a new cleaning patch each time, until the patch is not dirty.
7. Push a clean patch saturated with Rem Oil through the barrel.
8. Push a clean, dry patch through the barrel to remove excess lubricant.
9. Apply a thin coat of Rem Oil to the outside of the barrel with a soft, clean cloth.

Cleaning the chamber

1. Engage the safety mechanism.
2. Pull the operating handle rearward until held open by the magazine follower.
3. Put the brush into the cleaning solvent.
4. Push the brush into the chamber through the ejection port. Repeat several times.
5. Using the rear of the cleaning brush with attached cleaning patch, dry chamber. Repeat using a clean patch each time, until patch is not dirty.

Cleaning the action spring and action tube

1. Loosen the fore-end screw and remove the fore-end.