

Take Rem Action Cleaner and spray down good to clean trigger assembly. Put one drop of oil in the scar hole and one drop in the trigger hole.

You can also put one drop on the safety pivot pin.

Get wonder lube grease and run a patch with it on it and go back down the bore. Get a stiff brush and clean nipple and breech. Grease threads on the nipple and breech brush and put back.

It is important to change the nipple every year.

Make sure that the top of the trigger assembly scar are cleaned good. Take bolt in first phase and let soak also. You can scrub these with a caliber specific brush and clean bolt body. Clean firing pin assembly with bore cleaner and a toothbrush. For storage coat the gun with wonder lube or Rem Oil. Make sure to clean either of those cleaners before using.

Vortex is the simplest way of cleaning. Plug up the end of the barrel, pour vortex in and let soak. Vortex also works for the nipple and the breech plug and the bolt just soak them.

When shooting the firearm, everytime you take a shot clean the bore with pre lubricated patches (bigger than cleaning patches).

Never put a dry patch against the bore. Can make a charge and ignite left over powder. NEVER USE NYLON!

ALWAYS USE LUBRICATED COTTON PATCHES.

The Ram rod is made out of aluminum and it is threaded. This can get stripped out or broken. You can send a new one for free.

There is an extension and the extension handle are made for cleaning.

Pieces that come with the gun are:

Jag (caliber specific/has it written on it)

Breech plug nipple wrench

Hex key or allen wrench (fits 2 trigger guard screws and cam follower screw-cam follower screw is used to take bolt off)

Ram rod extension

(there is also a 5/32 hex head screw on top of trigger that is not included)

The ram rod extension handle and cleaning tube (goes through the back of the receiver with the bolt out and screws down into the breech plug threads)

Can buy bronze bristle brush.

The ram rod bracket is the bracket around the barrel that holds the ram rod.

If the ram rod keeps falling out, take the stock off and bend screw (this is the