

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use correct size cleaning rod.
2. Push cleaning rod from the chamber and all the way through the barrel, until the rod comes out of the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON AUTHORIZED SERVICE CENTER.

WARNING: NEVER try to remove an object from the barrel by pushing a nail or cartridge and trying to pull it out because this can damage the barrel or a cartridge case and cause serious bodily injury.

III. TO CLEAN THE BARREL FOLLOW THE INSTRUCTIONS SHOWN ON PAGE 10.

Before loading the firearm, make sure the inside of the barrel is free of dirt or other foreign objects.

To Load the Firearm**TO LOAD ONE CARTRIDGE ONLY:**

1. Point the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Pull the bolt handle all the way back.
5. Put one cartridge of the correct caliber on the loading platform of the chamber. See Picture 7.
6. Slide the bolt handle forward, then push the bolt handle down to load the cartridge into the chamber.

THE FIREARM IS NOW LOADED.

7. When you have the firearm pointed safely downrange and are ready to fire, put the safety mechanism in the 'F' or 'I'c position.

THE FIREARM IS NOW READY TO FIRE BY FOLLOWING THE INSTRUCTIONS.

WARNING: Always check the cartridges for the correct caliber before loading them into the firearm.

**To Unload the Firearm**

1. Point the muzzle of the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle rearward with your other hand to remove the cartridge from the chamber.
6. Hold cartridge and remove it from the firearm.

WARNING: Check the chamber and the loading platform to make sure there are no cartridges in the firearm.

TELESCOPIC SIGHTS:

The top of the receiver has holes for the installation of telescopic sights.

Lubrication and Maintenance

When the firearm is to be stored, it should be carefully cleaned and thoroughly oiled. Outside surfaces should be wiped with a light coat of Rem™ Oil. Before storing, when the firearm is to be set aside, all excess lubricant must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington® Rem™ Oil is available from your dealer. If your dealer is out of stock, ask him to order Rem™ Oil from his Remington distributor.

To Clean the Barrel

WARNING: Check the chamber after cleaning to make sure there are no cartridges in the firearm.

1. Use the equipment suggested in a good clearing kit. For recommendations, see your REMINGTON AUTHORIZED SERVICE CENTER.
2. Remove the bolt assembly. See instructions on page 8.