

3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

**NOTE:** Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is no longer dirty.
8. Push a clean patch saturated with Rem™ Oil through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of Rem™ Oil to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.



**WARNING:** This firearm should be checked periodically by the Remington Arms Company, Inc. or the MAJ or RJA AUTHORIZED SERVICE CENTER. This will ensure proper inspection and any necessary repairs or alterations to the designated parts.

### To Clean the Receiver and Trigger Assembly

1. Put the safety mechanism in the "S" position.
2. Remove the bolt assembly. See Instructions on page 8.
3. Turn the rifle upside down.
4. Remove the stock screws. See Picture 8.

5. Lift the stock away from the receiver and trigger assembly.  
**NOTE:** Clean and lubricate the receiver and trigger assembly as a unit. Do not remove the trigger assembly from the receiver.

6. Thoroughly spray the receiver inside and out with Rem™ Action Cleaner. Allow to dry.
7. Thoroughly spray inside the trigger assembly at the four points specified in Picture 9 with Rem Action Cleaner.
8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.
9. Pull and hold the trigger rearward. Then, using a small punch or screwdriver depress the sear (Lubrication Point 1 in Picture 9) and release multiple times.
10. Release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times.
11. Again thoroughly spray inside the trigger assembly at the four points specified in Picture 9 with Rem Action Cleaner. Air dry or use compressed air to thoroughly dry the trigger assembly.
12. Place a drop of Rem™ Oil in each of the four points in the trigger assembly specified in Picture 9.
13. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times. For some this step returns completely to the forward position each time. **If the trigger does not completely return, reassemble the rifle and return it to a Remington® Authorized Service Center.**

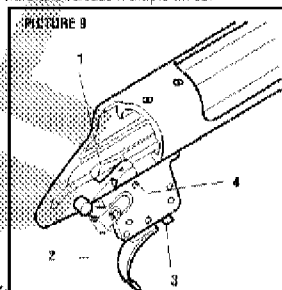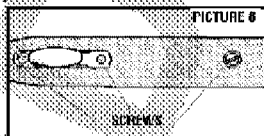

**WARNING:** If the trigger does not fully return to the forward position each time it is released, shut your rifle to RJA in a Service Center for repair and do not use until fully repaired and functional by a Remington Authorized Service Center.

14. If the trigger completely returns as specified in operation 13, pull and hold the trigger rearward and using a small punch or screwdriver depress the sear and release multiple times. The sear must return to the full forward position without hesitation. **If the sear does not freely return, reassemble the rifle and return it to a Remington Authorized Service Center.**