

		(12, 16, 20), 878, 11-48 all gauges)			7600
14742	Extractor Plunger	870, 1100 (410ga)	18750	Sear	11-87, 1100, 870, 11-48, 878, 58, 742, 760, 740, 572, 552, 7400, 7600
17433	Extractor Spring	11-87, 1100 (all gauges), 870 (12, 16, 20-28 ga, 58 (all gauges), 878	19993	Stock Bearing Plate	11-48, 1100, 870 (12, 16, 20 ga), 58, 878 (all gauges)
14806	Extractor Spring	870 (410ga)	19621	Stock Bearing Plate	11-48 (28, 41 ga), 740, 742, 760, 7400, 7600
17436	Firing Pin	11-87, 1100, 870, 11-48, 58, 878 (all gauges)	20601	Trigger Plate Pin Front	870, 1100, 58, 11-48 (12, 16, 20 ga), 878, 11-87
18623	Firing Pin Retaining Pin	11-87, 1100, 870, 58 (12, 16, 20 ga), 878, 11-48 (all gauges)	20606	Trigger Plate Pin Rear	870, 1100, 58, 11-48 (12, 16, 20 ga), 878, 11-878, 11-87
14297	Firing Pin Retaining Pin	1100 (28, 410, 20 LW & LT-2), 870 (28, 41 ga)	20602	Trigger Plate Pin Front	11 (28, 410, 20LW, LT-20), 870, 11-48 928, 410 ga), 740, 742, 760
93505	Firing Pin Return Spring	11-87, 1100, 870, 11-48, 58, 878	20607	Trigger Plate Pin Rear	1100 (28, 410, 20LW, LT-20), 870, 11-48 (28, 410 ga), 740, 742, 760, 552, 572