

provide an answer to my question in the first place. I am not asking about a "bolt lock" on pre-1982 models. I'm asking about why the safety switch will not go into the safe position when the gun is NOT cocked on current Model 700 BDL. I also asked what the recommended procedure is for uncocking the rifle without dry-firing it. Please provide a reasonable and specific answer to my 2 original questions. Thank you.

Kevin
Remington Customer