

1. Put the safety mechanism in the "S" position.
2. Remove the bolt assembly.
3. Turn the rifle upside down.
4. Remove the stock screws
5. Lift the stock away from the receiver and trigger assembly.

Note: clean and lubricate the receiver and trigger assembly as a unit. Do not remove the trigger assembly from the receiver.

6. Thoroughly spray the receiver inside and out with Rem Action Cleaner and allow to dry.
7. Thoroughly spray inside the trigger assembly with the Rem Action Cleaner at the four points specified in picture 15, page 11 of your owner's manual.
8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.
9. Pull and hold the trigger rearward. Then using a small screwdriver, depress the sear and release multiple times.
10. Release the trigger and operate the safety from the "F" to the "S" position multiple times.
11. Again thoroughly spray inside the trigger assembly at the four points specified in picture 15.  
Air dry or use compressed air to thoroughly dry the trigger assembly.
12. Place a drop of Rem Oil in each of the four points in the trigger assembly specified in picture 15.
13. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times. Ensure the trigger returns completely to the forward position each time. If the trigger does not completely return, reassemble the rifle and return it to a Remington Authorized Service Center.

To clean the magazine assembly:

Detachable magazine

1. Depress the magazine latches inward and pull the magazine down.
2. Spray RemAction cleaner in the assembly until the liquid runs out clear.

Floorplate:

1. Depress the floor plate latch to release the floor plate.
2. Spray RemAction cleaner in the assembly until the liquid runs out clear.

To clean the stock:

1. Remove the barrel assembly by removing the front and rear guard screws. See schematic for visual.
2. To clean a synthetic stock, dampen a cloth with warm soapy water and wipe clean.