

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use the correct size cleaning rod.
2. Push the cleaning rod from the chamber end all the way through the barrel. Until the rod comes out of the muzzle.
3. If an object can't be easily pushed out of the barrel with a cleaning rod, return the firearm to the dealer or a REMINGTON® RECOMMENDED GUNSMITH.

WARNING: NEVER try to remove an object from the barrel by loading another cartridge and firing. This may cause the barrel to burst or a cartridge case to rupture and cause serious injury or death.

III. TO CLEAN THE BARREL, FOLLOW THE INSTRUCTIONS SHOWN ON PAGE 15.


To Load the Firearm

Before loading the firearm, make sure the inside of the barrel is free of dirt or other obstructions.

1. TO LOAD ONE CARTRIDGE ONLY:

WARNING: Use Remington-UMC® ammo for ONLY. Always check the cartridge for proper fit and
weight before use.

1. Point the firearm in a safe direction.
 2. Put the safety mechanism in the **S-SAFE** position.
 3. Turn the key switch to the **OFF/DISABLED (O)** position.
 4. Raise the bolt handle.
 5. Pull the bolt handle all the way back.
 6. Pull one cartridge of the correct caliber on the magazine loader or in the chamber. See Picture 11.
 7. Slide the bolt handle forward, then push the bolt handle down to lock the cartridge into the chamber.
- 

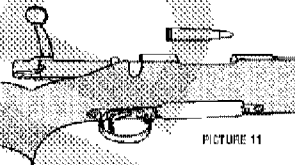

PICTURE 11

THE FIREARM IS NOW LOADED

9. To fire the firearm, put the safety mechanism in the **SAFE** position. The LED will turn **ON** so that when the firearm is ready to fire.

THE FIREARM IS READY TO FIRE.

NOTE: If the firearm is not fired within approximately 30 minutes, the system will put itself in a low power consumption mode. To reactivate the system:

1. Point the firearm in a safe direction.
2. Move the safety mechanism to the **S-SAFE** position.
3. Put the safety mechanism to the **F-FIRE** position.
4. When the **LED** turns **ON** solid, **THE FIREARMS IS AGAIN READY TO FIRE.**

II. TO LOAD THE CHAMBER MAGAZINE:

WARNING: Don't deny and hide your sins from God. A sin checks the cartridge for the consequences of your sin on the dream.

1. Point the freewheel in a safe direction.
2. Put the safety mechanism in the **S-SAFE** position.
3. Turn the key switch to the **OFF/DISABLED (O)** position.
4. Raise the bolt handle.
5. Pull the bolt handle all the way back.

