

6. Push four cartridges of the correct caliber, one at a time, into the magazine. If the firearm is a magnum, you can only load three cartridges. If the firearm is a .17, .222 or .223 caliber, the magazine will hold five cartridges. Keep the bullets aligned toward the chamber. See Picture 11 on page 13.

7. Put one cartridge into the chamber.

8. Use your fingers to push the cartridges in the magazine all the way down. Slowly slide the ejection assembly forward, so that the bolt slides over the top of the cartridges in the magazine.

9. Push the bolt handle down.

THE CHAMBER AND MAGAZINE ARE NOW FULLY LOADED.

10. Turn the key switch to the **ON/ENABLED (I)** position.

11. To fire the firearm, put the safety mechanism in the **F-FIRE** position.

12. When the **LED** turns **ON** solid, **THE FIREARM IS READY TO FIRE.**

NOTE: If the firearm is not fired within approximately 30 minutes, the system will automatically enter low power or sleep mode. To reactivate the system:

1. Point the firearm in a safe direction.

2. Move the safety mechanism to the **S-SAFE** position.

3. Put the safety mechanism to the **F-FIRE** position.

4. When the **LED** turns **ON** solid, **THE FIREARM IS AGAIN READY TO FIRE.**

To Unload the Firearm

WARNING: Do not point firearm where you are not aiming it.

1. Point the firearm in a safe direction.

2. Put the safety mechanism in the **S-SAFE** position.

3. Turn the key switch to the **OFF/DISABLED (O)** position.

4. Raise the bolt handle.

5. Put one hand over the top of the ejection port.

6. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.

7. Hold cartridge and remove it from the firearm.

8. Put your hand under the floor plate.


9. Push the floor plate latch to release the floor plate. See

Picture 12. The magazine spring and follower will be released from the magazine.

10. Remove released cartridges.

11. Push in the magazine follower, then close the floor plate.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

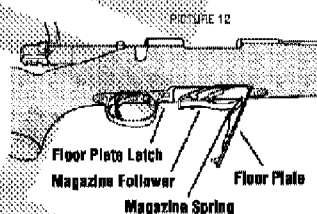

Lubrication and Maintenance

Over-lubrication should be avoided. All of the Remington® recommendations for the use of Rem® Oil. Other oils and lubricants may have conducting properties that may interfere with the operations of the firearm. A thin coat of Rem® Oil helps to prevent rusting. See notes below.

When the firearm is to be stored, it should be cleaned and thoroughly oiled. While in storage, outside surfaces should be periodically wiped with a light coat of Rem® Oil. Remington also recommends that the battery be removed from the firearm when the firearm is stored for extended periods of time (see instructions on page 10).

When the firearm is to be used again, the storage oil should be removed. The chamber and magazine should be cleaned and oiled. The result the battery in the firearm (see instructions on page 10).

NOTE: Remington Rem® Oil is available from your local dealer. If your dealer is out of stock, ask them to order Rem® Oil from a Remington distributor.

