


2. With the bolt assembly and bolt stop screw removed, place the breech plug in the bolt assembly clearance hole in the receiver, with the hexagon flats facing rearward.
3. Since the breech plug through the receiver until it stops against the rear of the barrel.
4. Use the hexagon end of the combination wrench or a standard 7/16" socket with a long extension to thread the breech plug into the rear of the barrel. Start it by hand at first to ensure it is not cross-threaded.
5. Make sure the breech plug is tightened snugly and the back face of the breech plug is even with the front edge of the ejector port in the receiver. Do not over-tighten. See Picture 8.

WARNING: THE BREECH PLUG MUST BE SEALED CORRECTLY IN THE BARREL TO ASSURE THE PROPER AND SAFE OPERATION OF THE FIREARM. DO NOT ATTEMPT TO FIRE THE RIFLE IF THE BRECH PLUG IS NOT SEALED PROPERLY AND TIGHTEN TIGHTLY WITH THE BACK FACE OF THE BRECH PLUG FLAT WITH THE FRONT EDGE OF THE EJECTOR PORT IN THE RECEIVER. IF THE BRECH PLUG CANNOT BE SEALED PROPERLY, RETURN THE FIREARM TO THE FACTORY OR A REMINGTON AUTHORIZED GUNSMITH.

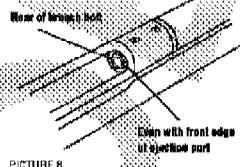

To Remove the Breech Plug

WARNING: If the nipple is in the breech plug as you are removing it, make sure there is no percussion cap on the nipple.

1. Point the firearm in a safe direction.
2. Put the safety mechanism in the 'S' position.
3. Raise the bolt handle to open the bolt.
4. Check to be sure there is no percussion cap on the nipple or percussion tube debris remaining on the nipple and there is no charge in the barrel. See instructions for using the rimfire test stick for a charge in the barrel on page 6.
5. **WARNING:** If there is a charge in the barrel, do not attempt to remove it by shooting it out if you are unsure what the charge is or if you are unsure if the shotgun is safe. Instead, carefully remove the charge using the instructions on pages 18 and 19.
6. Remove the bolt assembly and bolt stop screw. See instructions on page 10.
7. Use the hexagon end of the combination wrench or a standard 7/16" socket with a long extension to remove the breech plug from the barrel.
8. If the breech plug can not be removed with reasonable force using a 7/16" socket with extension, return the firearm to the factory or a REMINGTON AUTHORIZED GUNSMITH.

To Install the Nipple

1. With an empty hull and a clean nipple, apply Remington Wonder Luc[®] paste for black powder to the threads of the nipple. This will protect it from the highly corrosive powder residues left from shooting black powder or PYRODEX[®] and ensure its easy removal. Apply also the Remington Wonder Luc[®] paste for black powder on the front face of the nipple. This will protect powder charge that comes in contact with it, increasing the chance of a rifle being reliable.
2. With the breech plug installed and the bolt stop screw and bolt assembly removed, thread the nipple into the breech plug. Start threading by hand to ensure that it does not cross-thread and then use the combination wrench. Be sure that the end of the nipple is seated snuggly against the bottom of the nipple hole in the breech plug. Do not over-tighten. See Picture 9.

WARNING: THE NIPPLE MUST BE SEALED CORRECTLY IN THE BRECH PLUG TO ENSURE THE PROPER AND SAFE OPERATION OF THE FIREARM. DO NOT ATTEMPT TO FIRE THIS RIFLE IF THE NIPPLE CANNOT BE SEALED PROPERLY. RETURN THE FIREARM TO THE FACTORY OR A REMINGTON AUTHORIZED GUNSMITH.

