

To Disassemble (Model 11-87)

WARNING: Check direction of arrow and the magazine to make sure fire and no shot is in the firearm.

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Pull the operating handle fully rearward until the bolt is held open by the carrier latch.
4. Unthread and remove the magazine cap.
5. Slide the fore-end forward and remove it from the magazine tube.

NOTE: A gas cylinder collar is used on 12-ga. models only.

11-87 12-ga. Super Magnum does not use a gas cylinder collar.

6. Remove the gas cylinder collar. See Picture 12 on page 11.

7. Hold the barrel in front of the gas cylinder. Pull the barrel from the receiver.

8. FOR 11-87 12-GA. SUPER MAGNUM ONLY:

Slide the barrel seal, barrel seal activator (when using 23rd shot), and piston/piston seal assembly from the magazine tube. See Picture 23a.


IMPORTANT: A BARREL SEAL ACTIVATOR IS USED ON THE MODEL 11-87 SUPER MAGNUMS WHEN FIRING 23rd LOADS. REMOVAL OF THE BARREL SEAL ACTIVATOR IS HIGHLY DISCOURAGED WHEN FIRING 23rd OR 34th LOADS.

FOR 11-87 12-GA. (23rd - 34th) ONLY: Slide the barrel seal and piston/piston seal assembly from the magazine tube. See Picture 23b.


FOR 11-87 20-GA. ONLY: Slide the barrel seal, barrel seal activator, piston and piston seal from the magazine tube. See Picture 24.

9. Hold the operating handle and close the action.
10. Pull the operating handle from the bolt. See Picture 21.
11. Push the carrier release and push upward on the carrier.
12. Reach in the bottom of the receiver. Press and hold the feed latch. See Picture 22.
13. Pull the action bar assembly from the receiver and the magazine tube. Release the feed latch.
14. Lift the brooch bolt assembly from the rear of the action bar assembly.
15. Replace the magazine cap.
16. Tap out the front and rear trigger plate pins. See Picture 25.
17. Lift the rear of the trigger plate assembly, slide rearward and remove it from the receiver.


WARNING: DO NOT allow the firearm to empty without the trigger plate assembly removed. The firearm must be disassembled and the trigger plate assembly removed. **RED BAND WILL NOT SHOW.**

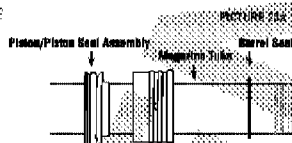


PICTURE 23a

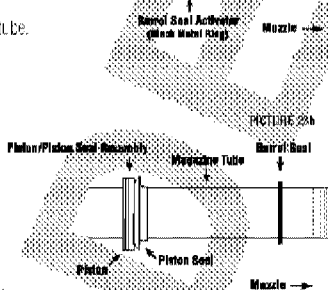

PICTURE 23b

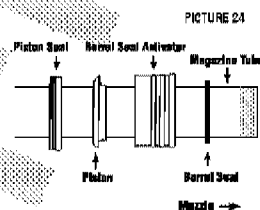

PICTURE 24

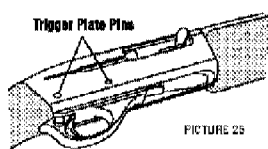

PICTURE 25